



## Information for the Configuration of MA4x DP-k

If the parameter setting for the INPUT Words (default is 10) and / or OUTPUT Words (default is 4) should be changed, the first step is to do the new setting for the MA4xDP-k with the Software "Com-Pro". After that the new setting is to set in the PLC Profibus configurator together with the GSx-file.

### Preparation of the MA4xDP-k for configuration

Switch positions at MA4xDP-k: Switch Betrieb/Service to Service → Position 1

Switch BCL/Profibus to Profibus → Position 2

Note: Bridge on 9-pin Service plug from Pin 4 to PIN 8 set with power up

### Working with Software „Compro“

The complete description is available as part in the „Manual / technical description MA40DP-k/MA41DP-k/MA42DP-k“. You can order it printed directly from Leuze electronic or as file-Download in the Internet from [www.leuze.de/ Download, Identify, Modular interfacing units](http://www.leuze.de/Download,Identify,Modular%20interfacing%20units).

After Download of the Software you start it: cprun.bat

→ Message / Info ... [Cr]  
→ Window with headline to select controls :arrow keys [Cr],[Esc]

Step 1: always „ReSTART“

Select: Online [Cr]  
→ Select : System [Cr]  
→ Select : REstart [Cr]  
→ Message „Are Shure?“ [Cr]  
→ 2.Message [Cr]  
→ wait for Response >> connect supply voltage to MA !!  
→ Restart is finished.

Step 2: Upload of database to check / set the IN/OUT Parameters (from MA to PC):

Select: Online [Cr]  
→ Select: Database[Cr]  
→ Select : upload [Cr]  
→ Overview of setting [Cr] >> second [Cr] starts transfer !!  
[Esc] [Esc]  
Select : Database [Cr]  
→ edit [Cr]  
→ Modules [Cr]  
Display of Module configuration, Modules/Settings can be edited !!  
[Module changes with „SPACE“ key]

Step 3: Download of database (from PC to MA):

Select: Online [Cr]  
→ Select : Database[Cr]  
→ select : download [Cr]  
→ Message „Are Shure?“ [Cr]  
→ Download prossess a counter runs in big steps downwards !

After successful configuration the Service plug should be taken off the sub-D, set the DIP-Switches of the MA (except address) to default and switch OFF power and ON again.