

























## Corded Reader Configuration Codes (v3.2)

Function	Value	Code
<b>Products Settings</b>	Reset Scanner to Factory Defaults	
<b>Reset</b>	Reboot Scanner	
<b>Diagnostics</b>	Output Diagnostic String	
<b>Setup</b>	*Enable Setup 1 Only	
	Enable Setup 2 Only	
	Enable Setup 3 Only	
	Enable Setup 4 Only	
<b>Match String Validation</b>	Use Next Code As Match String	









# Corded Reader Configuration Codes (v3.2)

Function	Value	Code
<b>Symbology Settings</b>	*Enable Data Matrix	
	Disable Data Matrix	
	Enable QR Code	
	*Disable QR Code	
	*Enable Code 128	
	Disable Code 128	
	*Enable UPC/EAN	
	Disable UPC/EAN	









# Corded Reader Configuration Codes (v3.2)

Function	Value	Code
<b>Symbology Settings</b>	*Enable Code 39	
	Disable Code 39	
	*Enable Code 93	
	Disable Code 93	
	*Enable Interleaved 2 of 5	
	Disable Interleaved 2 of 5	
	*Enable Codabar	
	Disable Codabar	









# Corded Reader Configuration Codes (v3.2)

Function	Value	Code
Symbology Settings	Enable Pharmacode	
	*Disable Pharmacode	
	*Enable PDF417	
	Disable PDF417	
	Enable RSS	
	*Disable RSS	
	Enable Micro PDF417	
	*Disable Micro PDF417	









# Corded Reader Configuration Codes (v3.2)

Function	Value	Code
<b>Symbology Settings</b>	Enable EAN.UCC Composite	
	*Disable EAN.UCC Composite	
	Enable POSTNET	
	*Disable POSTNET	
	Enable PLANET	
	*Disable PLANET	
	Enable Japan Post	
	*Disable Japan Post	

## Corded Reader Configuration Codes (v3.2)

Function	Value	Code
<b>Symbology Settings</b>	Enable Australia Post	
	*Disable Australia Post	
	Enable UPU	
	*Disable UPU	
	Enable USPS OneCode	
	*Disable USPS OneCode	
<b>1D Symbology Settings</b>	*Enable Use Target Decoding (simulates laser scanning)	
	Disable Use Target Decoding (simulates laser scanning)	

## Corded Reader Configuration Codes (v3.2)

Function	Value	Code
<b>Data Validation / Data Formatting</b>	Enable DoD UID Validation with UII Output (for Data Matrix only)	
	*Disable DoD UID Validation with UII Output (for Data Matrix only)	
<b>Non-Printable Characters</b>	Enable Translate Unprintable Chars	
	*Disable Translate Unprintable Chars	
<b>System Settings</b>	Enable Presentation Mode	
	*Disable Presentation Mode	
<b>Custom Commands</b>	Enable Serial Trigger	
	*Disable Serial Trigger	

## Corded Reader Configuration Codes (v3.2)

Function	Value	Code
<b>Custom Commands</b>	Enable Echo Commands	
	*Disable Echo Commands	
<b>Wake-up Message</b>	Enable Output Diagnostic String on Wake-up	
	*Disable Output Diagnostic String on Wake-up	
<b>Connection Type</b>	*RS-232 / USB-COM	
	Keyboard Wedge / USB-Keyboard	
	Keyboard Emulation / USB-Keyboard	
<b>RS-232 Baud Rate</b>	9600 BPS	
	19200 BPS	



## Corded Reader Configuration Codes (v3.2)

Function	Value	Code
<b>RS-232 Baud Rate</b>	*38400 BPS	
	57600 BPS	
	115200 BPS	
<b>RS-232 Word Length</b>	8 Data, 1 Stop, Even	
	*8 Data, 1 Stop, None	
	8 Data, 1 Stop, Odd	
<b>RS-232 Handshaking</b>	*RTS/CTS Off	
	RTS/CTS On	

# Corded Reader Configuration Codes (v3.2)

Function	Value	Code
<b>Keyboard Country</b>	*USA	
	Germany	
	France	
	Spain	
	Japan	
	Alt Key Combo	
<b>Alt Key Combo Zero Padding</b>	*Enabled	
	Disabled	

\* - default setting