

















Cordless Reader Configuration Codes (v3.2)

| Function | Value | Code |
|--------------------------|--|---|
| Products Settings | Reset Scanner to Factory Defaults |  |
| | Reset Base Station to Factory Defaults |  |
| Reset | Reboot Scanner |  |
| Diagnostics | Output Diagnostic String |  |
| Disconnect | Unlink Bluetooth Connection |  |
| Setup | *Enable Setup 1 Only |  |
| | Enable Setup 2 Only |  |
| | Enable Setup 3 Only |  |









Cordless Reader Configuration Codes (v3.2)

| Function | Value | Code |
|--------------------------------|-------------------------------|---|
| Setup | Enable Setup 4 Only |  |
| Match String Validation | Use Next Code As Match String |  |
| Symbology Settings | *Enable Data Matrix |  |
| | Disable Data Matrix |  |
| | Enable QR Code |  |
| | *Disable QR Code |  |
| | *Enable Code 128 |  |
| | Disable Code 128 |  |









Cordless Reader Configuration Codes (v3.2)

| Function | Value | Code |
|--------------------|----------------------------|---|
| Symbology Settings | *Enable UPC/EAN |  |
| | Disable UPC/EAN |  |
| | *Enable Code 39 |  |
| | Disable Code 39 |  |
| | *Enable Code 93 |  |
| | Disable Code 93 |  |
| | *Enable Interleaved 2 of 5 |  |
| | Disable Interleaved 2 of 5 |  |









Cordless Reader Configuration Codes (v3.2)

| Function | Value | Code |
|---------------------------|---------------------|---|
| Symbology Settings | *Enable Codabar |  |
| | Disable Codabar |  |
| | Enable Pharmacode |  |
| | *Disable Pharmacode |  |
| | *Enable PDF417 |  |
| | Disable PDF417 |  |
| | Enable RSS |  |
| | *Disable RSS |  |









Cordless Reader Configuration Codes (v3.2)

| Function | Value | Code |
|---------------------------|----------------------------|---|
| Symbology Settings | Enable Micro PDF417 |  |
| | *Disable Micro PDF417 |  |
| | Enable EAN.UCC Composite |  |
| | *Disable EAN.UCC Composite |  |
| | Enable POSTNET |  |
| | *Disable POSTNET |  |
| | Enable PLANET |  |
| | *Disable PLANET |  |









Cordless Reader Configuration Codes (v3.2)

| Function | Value | Code |
|---------------------------|-------------------------|---|
| Symbology Settings | Enable Japan Post |  |
| | *Disable Japan Post |  |
| | Enable Australia Post |  |
| | *Disable Australia Post |  |
| | Enable UPU |  |
| | *Disable UPU |  |
| | Enable USPS OneCode |  |
| | *Disable USPS OneCode |  |









Cordless Reader Configuration Codes (v3.2)

| Function | Value | Code |
|--|--|---|
| 1D Symbology Settings | *Enable Use Target Decoding (simulates laser scanning) |  |
| | Disable Use Target Decoding (simulates laser scanning) |  |
| Data Validation / Data Formatting | Enable DoD UID Validation with UII Output (for Data Matrix only) |  |
| | *Disable DoD UID Validation with UII Output (for Data Matrix only) |  |
| Non-Printable Characters | Enable Translate Unprintable Chars |  |
| | *Disable Translate Unprintable Chars |  |
| Bluetooth Settings | *Enable Offline Buffering |  |
| | Disable Offline Buffering |  |

Cordless Reader Configuration Codes (v3.2)

| Function | Value | Code |
|------------------------|--------------------------------------|---|
| System Settings | Enable Presentation Mode |  |
| | *Disable Presentation Mode |  |
| Custom Commands | Enable Serial Trigger |  |
| | *Disable Serial Trigger |  |
| | Enable Echo Commands |  |
| | *Disable Echo Commands |  |
| Timeouts | Enable Never Enter Power Save Mode |  |
| | *Disable Never Enter Power Save Mode |  |









Cordless Reader Configuration Codes (v3.2)

| Function | Value | Code |
|-------------------------|--|---|
| Wake-up Message | Enable Output Diagnostic String on Wake-up |  |
| | *Disable Output Diagnostic String on Wake-up |  |
| Connection Type | RS-232 |  |
| | *Keyboard Wedge |  |
| | USB-COM |  |
| | USB-Keyboard |  |
| RS-232 Baud Rate | 9600 BPS |  |
| | 19200 BPS |  |




Cordless Reader Configuration Codes (v3.2)

| Function | Value | Code |
|-------------------------------|----------------------|---|
| RS-232 Baud Rate | 38400 BPS |  |
| | 57600 BPS |  |
| | *115200 BPS |  |
| RS-232 Word Length | 7 Data, 1 Stop, Even |  |
| | 7 Data, 1 Stop, None |  |
| | 7 Data, 1 Stop, Odd |  |
| | 7 Data, 2 Stop, Even |  |
| | 7 Data, 2 Stop, None |  |

Cordless Reader Configuration Codes (v3.2)

| Function | Value | Code |
|---------------------------|-----------------------|---|
| RS-232 Word Length | 7 Data, 2 Stop, Odd |  |
| | 8 Data, 1 Stop, Even |  |
| | *8 Data, 1 Stop, None |  |
| | 8 Data, 1 Stop, Odd |  |
| RS-232 Handshaking | *RTS/CTS Off |  |
| | RTS/CTS On |  |
| Keyboard Country | *USA |  |
| | Germany |  |

Cordless Reader Configuration Codes (v3.2)

| Function | Value | Code |
|------------------|--------|---|
| Keyboard Country | France |  |
| | Spain |  |
| | Japan |  |

* - default setting