

## VRTU 430

## Ultrasonic sensors

Part No. 501 09147



**60 ... 300mm  
200 ... 1300mm**



- Ideal for detection of levels of liquids, bulk materials, transparent media, ...
- Distance information largely independent of surface properties
- PC-configuration software for configuring sensor and switching output
- Up to 10 devices can be synchronised via the SYNC input
- Separate adjustment of start and end of switching range (Q1) via potentiometer and PC




### Accessories:


(available separately)

- Cable with M12 connector (K-D ...)
- "USDS-Config" configuration software (free download from [www.leuze.com](http://www.leuze.com))
- PGU 01 (programming unit)

### Dimensioned drawing

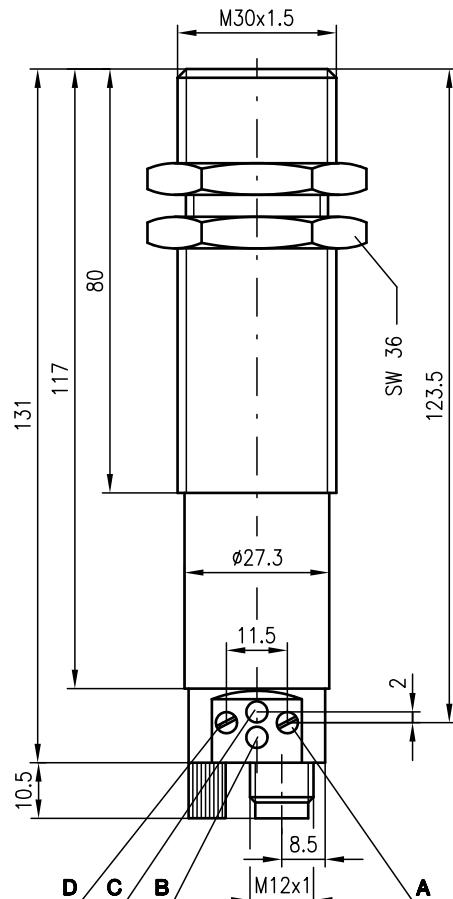

### Electrical connection

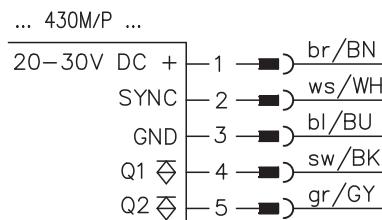

Switching outputs Q1 and Q2 switch alternately!

## Specifications

### Ultrasonic specifications

	VRTU...-5110-300...	VRTU...-3110-1300...
Operating range <sup>1)</sup>	60 ... 300mm	200 ... 1300mm
Ultrasonic frequency	400kHz	200kHz
Opening angle	6°	
Resolution	≤ 1 mm	≥ 1 mm
Absolute measurement accuracy	± 1.5% of the measurement range end value	
Reproducibility	± 0.45 mm	± 2 mm
Switching hysteresis	10mm	10mm

### Timing

Switching frequency (min.) <sup>2)</sup>	8Hz	4Hz
Response time (max.) <sup>2)</sup>	80ms	110ms
Delay before start-up	280ms	280ms

### Electrical data

Operating voltage U <sub>B</sub>	20 ... 30VDC (incl. ± 10% residual ripple)
Residual ripple	± 10% of U <sub>B</sub>
Bias current	≤ 50mA (without load)
Switching output	2 PNP transistors
Function characteristics	switching in case of object recognition
Output current	300mA
Switching range adjustment	potentiometer 270°

### Indicators

Yellow LED	output activated
Flashing yellow LED	programming error

### Mechanical data

Housing	metal / CuZn
Weight	210g
Connection type	M12 connector, plastic, 5-pin

### Environmental data

Ambient temp. (operation/storage)	-25°C ... +70°C/-40°C ... +85°C
Protective circuit <sup>3)</sup>	1, 2, 3
VDE safety class	III
Protection class	IP 65
Standards applied	IEC 60947-5-2
Fitting position	any

1) For the complete temperature range, measured object ≥ 10x10mm

2) Can be configured up to 3 times faster using "USDS-Config"


3) 1=short-circuit and overload protection, 2=polarity reversal protection, 3=wire break and inductive protection

## Tables

### Diagrams



#### VRTU...-5110-300...

Typ. response behaviour (object 10x10mm)

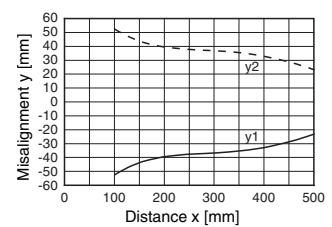

#### VRTU...-3110-1300...

Typ. response behaviour (object 10x10mm)

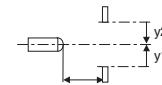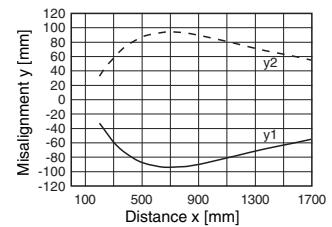

## Remarks

### Approved purpose:

The ultrasonic sensors are used for acoustic, contactless detection of objects.

## Remarks

- Synchronisation:  
Mutual interference is excluded by connecting the sensors with the SYNC input.

### Configuration software "USDS-Config"

The configuration software runs under Windows 95/98/NT/2000/XP and offers the following features:

- Configuration of multiplex operation
- Configuration of the sensor (attenuation, switching frequency, response time)
- Adjustment of the switching output (cut-in/cut-out point, hysteresis, object present yes/no)
- Support of various languages


## Order guide

Designation	Part No.
VRTU 430M/P-5110-300-S12	500 36261
VRTU 430M/P-3110-1300-S12	500 36262

## Switching behaviour of the switching outputs:

### a) 2 switching outputs Q1 and Q2


Configuration of the outputs as make-contacts  
(factory setting)

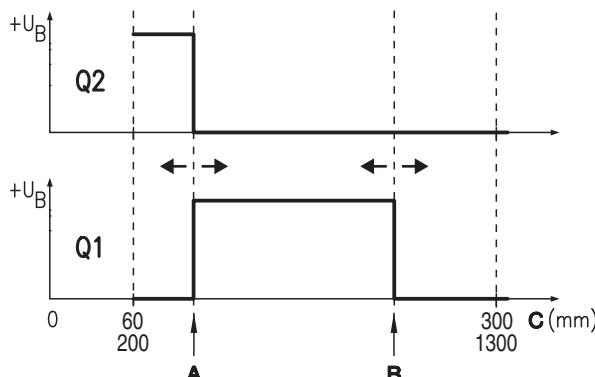

- A Cut-in point Q1 = Cut-out point Q2 = 0!  
(potentiometer D on min. distance / limit stop, see dimensioned drawing)
- B Cut-out point Q1  
(potentiometer A, see dimensioned drawing)
- C Measurement distance

### b) Only 1 switching output Q1

Configuration of the outputs as make-contacts  
(factory setting)

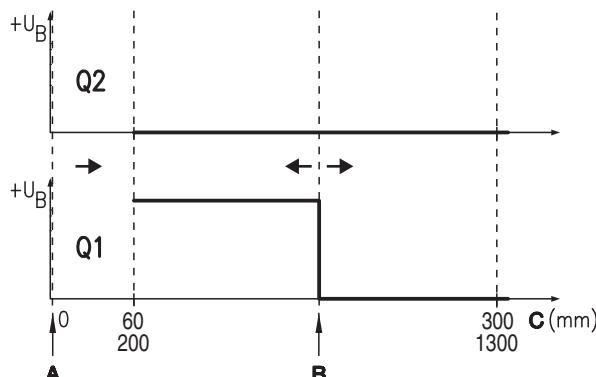


- A Cut-in point Q1 = Cut-out point Q2 = 0!  
(potentiometer D on min. distance / limit stop, see dimensioned drawing)  
⇒ Output Q2 no function.
- B Cut-out point Q1  
(potentiometer A, see dimensioned drawing)
- C Measurement distance

 Switching point A must always be set to a shorter distance than switching point B!  
If the distance between switching points A and B is less than the configured hysteresis, the yellow LEDs flash (programming error).

### c) Filling level control


Can be activated using the "USDS-Config" configuration software via Settings -> Mode -> Level Control.  
Output function: NC (break-contact)

#### Rising level

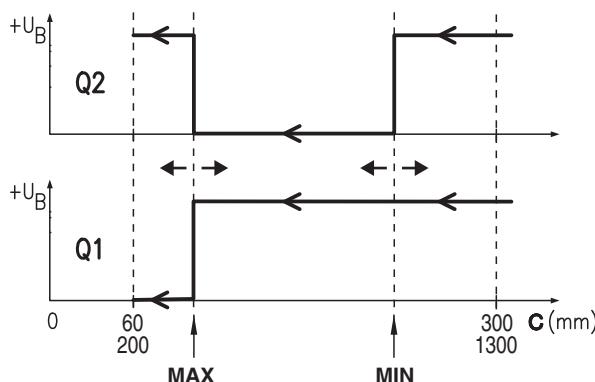

- MAX Switching point at maximum fill level  
(potentiometer D, see dimensioned drawing)
- MIN Switching point at minimum fill level  
(potentiometer A, see dimensioned drawing)
- C Measurement distance

#### Falling level

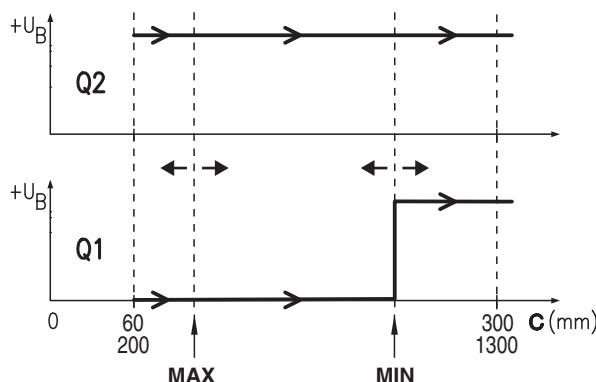

- MAX Switching point at maximum fill level  
(potentiometer D, see dimensioned drawing)
- MIN Switching point at minimum fill level  
(potentiometer A, see dimensioned drawing)
- C Measurement distance

