

Original operating instructions

MSI-sx/Rx Modular safety interface



© 2020

Leuze electronic GmbH & Co. KG

In der Braike 1

D-73277 Owen / Germany

Phone: +49 7021 573-0

Fax: +49 7021 573-199

<http://www.leuze.com>

info@leuze.com

1	About this document	4
2	System overview and range of applications	4
2.1	General information	4
2.2	Certifications	4
2.3	Terminology	4
2.4	Nomenclature MSI-sx/Rx	5
3	Safety	6
3.1	Intended use and foreseeable misuse	6
3.1.1	Intended use	6
3.1.2	Foreseeable misuse	8
3.2	Competent personnel	8
3.3	Responsibility for safety	8
3.4	Exemption of liability	8
3.5	Connection of E-STOP buttons	9
4	System design and functions	10
4.1	System design	10
4.2	DIP switch settings	10
4.2.1	MSI-sx module DIP switch	10
4.2.2	Rx output DIP switch	10
4.3	Operating modes and functions	11
4.3.1	Operating modes – interlocking and contactor monitoring functions	11
4.3.1.1	Operating mode: with start/restart interlock – with dynamic contactor monitoring	12
4.3.1.2	Operating mode: with start/restart interlock – with static contactor monitoring	12
4.3.1.3	Operating mode: with start/restart interlock – without contactor monitoring	13
4.3.1.4	Operating mode: without start/restart interlock – without contactor monitoring	13
4.3.1.5	Operating mode: with start/without restart interlock – without contactor monitoring	14
4.3.2	Relay switching cycle monitoring function with prefailure message (in /Rx versions)	14
4.4	Indicators	14
4.5	Signal outputs	15
4.6	Diagnostics function	16
5	Electrical connection	18
5.1	Installation instructions	18
5.2	Power supply requirements	18
5.3	Connecting AOPDs, type 4 or type 2	18
5.4	Connecting to the machine control	19
6	Connection examples	21
7	Technical data and order guide	23
7.1	MSI-sx	23
7.2	/Rx output	24
7.3	Dimensioned drawing	25
7.4	Order guide	25
8	EC Declaration of Conformity	27

1 About this document

These connecting and operating instructions contain information on the approved purpose and use of MSI safety interfaces.

⚠ ATTENTION!	
	All information provided in the connecting and operating instructions, especially the Safety Notices, must be observed.

Safety and warning notices are marked with the  symbol.

These connecting and operating instructions must be kept in a safe place. It must be available during the mission time of the MSI safety interfaces.

Leuze electronic GmbH + Co. KG is not liable for damages caused by improper use. Knowledge of these connecting and operating instructions is considered an element of proper use.

2 System overview and range of applications

2.1 General information

The Modular Safety Interface (MSI) serves as a link between one or more active optoelectronic protective devices (AOPD), type 2, type 3 or type 4, and the machine control. All MSI safety components include start/restart interlock and contactor monitoring functions that can be activated and deactivated. They are also equipped with a series of signal outputs and LED indicators as well as a diagnostic interface to a PC.

Leuze electronic offers a range of additional MSI safety interfaces with standard and special function, e.g. muting (intentional suppression of the safety function) or cycle control (single cycle, two cycle).

All MSI safety modules are equipped with relay outputs. The x-variants allow the additional connection of safety switches or E-STOP buttons acc. to category 4.

2.2 Certifications

Europe
EC Type Examination TÜV SÜD

2.3 Terminology

AOPD	Active Optoelectronic Protective Device
Diagn.	Diagnosis Function
EDM	External Device Monitoring Contactor monitoring
ESPE	Electro-sensitive Protective Equipment
Fault	Relay error
Locked	Start/Restart Interlock active
MSI Fault	MSI error
N.C.	Normally Closed Contact
N.O.	Normally Open Contact
OSSD	Safety-related switching output
Reset	Start/Restart Interlock Initiator

RS 232	Interface RS 232
S1 – S4	Safety input 1 – 4
S1 & S2 S3 & S4	Indication protective fields free/interrupted
Safety Switches	Safety Switches
SSD	Secondary Switching Device Switches to ON state when the MSI is ready for operation
State	Status
Test	Test Signal Outputs
T1, T2	Test signal output 1, 2
Warn. (Rx module)	Warning (preset number of switching actuations exceeded)

2.4 Nomenclature MSI-sx/Rx

MSI	Modular Safety Interface
s	standard
x	Extended functions The extended version offers the following standard functions for either 2 AOPD, type 4, or up to 4 AOPDs, type 2: • Start/restart interlock • Contactor monitoring • Diagnostics function
/Rx	Relay output with extended functions: • Two safety-related normally open contacts, OSSD 1 and OSSD 2 • Status indicators and signal outputs • One safety-related normally closed contact OSSD 3 • One normally open contact "MSI readiness" SSD Additional special function: • Relay switching cycle monitoring with prefailure message

3 Safety

Before using the safety interface, a risk assessment must be performed according to valid standards (e.g. EN ISO 12100, EN ISO 13849-1, EN 62061). The result of the risk assessment determines the required safety level of the safety interface (see table in chapter 3.1.1). For mounting, operating and testing, document "MSI-sx/Rx Modular Safety Interface" as well as all applicable national and international standards, regulations, rules and directives must be observed. Relevant and supplied documents must be observed, printed and handed to the affected personnel.

Before working with the safety interface, completely read and understand the documents applicable to your task.

In particular, the current version of the following national and international legal regulations apply for commissioning, technical tests and handling of safety sensors:

- Machinery Directive
- Low Voltage Directive
- Electromagnetic compatibility
- Use of Work Equipment Directive
- OSHA
- Safety regulations
- Accident-prevention regulations and safety rules
- Ordinance on Industrial Safety and Health and employment protection act
- Product Safety Law (ProdSG)

NOTE	
	Local agencies can also provide safety-relevant information (e.g. occupational safety and health inspectorate, employer's liability insurance association, labor inspectorate, OSHA).

3.1 Intended use and foreseeable misuse

⚠ ATTENTION!	
	A running machine can cause severe injuries! ↳ Make certain that, during all conversions, maintenance work and inspections, the system is securely shut down and protected against being restarted.

3.1.1 Intended use

- The safety interface may only be used after it has been selected in accordance with the respectively applicable instructions and relevant standards, rules and regulations regarding labor protection and safety at work, and after it has been installed on the machine, connected, commissioned, and checked by a competent person.
- When selecting the safety interface it must be ensured that its safety-related capability meets or exceeds the required Performance Level PL_r ascertained in the risk assessment.

The following table shows the safety-related characteristic parameters of the MSI-sx/Rx modular safety interfaces.

Type in accordance with EN 61496-1	Type 4
SIL in accordance with EN 61508	SIL 3
Performance Level (PL) in accordance with EN ISO 13849-1:2015	PL e
Category in accordance with EN ISO 13849-1:2015	Cat. 4
Mean probability of a dangerous failure per hour (PFH _d) as a function of the mean number of annual switching cycles of the relay n _{op} *	100% Load n _{op} = 4,800: 1.6 x 10 ⁻⁰⁸ 1/h 60% Load n _{op} = 4,800: 1.3 x 10 ⁻⁰⁸ 1/h 100% Load n _{op} = 28,800: 3.8 x 10 ⁻⁰⁸ 1/h 60% Load n _{op} = 28,800: 1.6 x 10 ⁻⁰⁸ 1/h 100% Load n _{op} = 86,400: 9.5 x 10 ⁻⁰⁸ 1/h 60% Load n _{op} = 86,400: 2.4 x 10 ⁻⁰⁸ 1/h
*n_{op} = mean number of annual actuations, see C.4.2 and C.4.3 of EN ISO 13849-1:2015 Use the following formula to calculate the mean number of annual actuations: $n_{op} = (d_{op} \cdot h_{op} \cdot 3600 \text{ s/h}) \div t_{Zyklus}$ In doing so, make the following assumptions with regard to the use of the component: h_{op} = mean operating time in hours per day d_{op} = mean operating time in days per year t_{cycle} = mean operating time between the start of two successive cycles of the component (e.g switching of a valve) in seconds per cycle	

- The safety interface is used in combination with one or more multiple light beam safety devices or safety light curtains to safeguard points of operation or danger zones.
- The control of the machine or system that is to be safeguarded must be electrically influenceable. A switch-off command initiated by an MSI must result in an immediate shutdown of the dangerous movement.
- The "Reset" acknowledgment button for unlocking the start/restart interlock must be mounted in such a way that the entire danger zone can be seen from its mounting location.
- Signal outputs (state output) and SSDs (Secondary Switching Device) must not be used for switching safety-relevant signals.
- The safety interface is designed for installation in a cabinet or a protective housing with a degree of protection of at least IP 54.
- The 24 V DC ±20% power supply must guarantee safe insulation from the mains voltage and be able to bridge a power outage period of 20 ms.
- Depending on external wiring, dangerous voltages may be present at the switching outputs. In addition to the power supply, these must be switched off and safeguarded against being switched back on prior to all work on the MSI-sx/Rx.
- These operating instructions must be included with the documentation of the machine on which the protective device is installed so that they are available to the operator at all times.
- In the event of changes to the MSI-sx/Rx, all warranty claims against the manufacturer of the safety interface are rendered void.
- The safety distance between the AOPD and the point of operation is to be maintained. It is calculated according to the formulas for machine-specific C standards or given in the general B1 standard EN ISO 13855. Both the reaction time of the test monitoring unit and the braking time of the machine must be taken into account.
- Two switching contacts must always be looped into the switch-off circuit of the machine. To prevent welding, relay switching contacts must be fused/protected externally according to the technical data.
- The safety interface must be exchanged after a maximum of 20 years. Repairs or the exchange of wear parts do not extend the mission time.
- The safety interface satisfies the requirements of safety category 4 acc. to EN ISO 13849-1:2015. If,

however, an AOPD of a lower safety category is connected, the total category for the given path of the control cannot be higher than that of the connected AOPD.

- Cross-circuits between S1 and S2 or S3 and S4 are only detected by the MSI safety module if both time-delayed test signal outputs, T1 and T2, are used for the connected protective device(s) with relay output. AODPs of type 4 with safety-relevant transistor outputs and their own cross circuit monitoring can be directly connected to S1 and S2 or S3 and S4.

3.1.2 Foreseeable misuse

Any use other than that defined under the "approved purpose" or which goes beyond that use is considered improper use!

e.g.,

- Applications in explosive or easily flammable atmospheres

 ATTENTION!	
	Such instances can jeopardize the health and lives of the personnel operating the machinery and/or may cause damage to property.

3.2 Competent personnel

Prerequisites for competent personnel:

- They have a suitable technical education.
- They know the rules and regulations for labor protection, safety at work and safety technology and can assess the safety of the machine.
- They know the instructions for the safety interface and the machine.
- They were instructed by the responsible individuals on the mounting and operation of the machine and of the safety interface.

3.3 Responsibility for safety

Manufacturer and operator must ensure that the machine and implemented safety interface function properly and that all affected persons are adequately informed and trained.

The type and content of all imparted information must not lead to unsafe actions by users.

The manufacturer of the machine is responsible for:

- Safe machine construction
- Safe implementation of the safety interface
- Imparting all relevant information to the operating company
- Adhering to all regulations and directives for the safe commissioning of the machine

The operator of the machine is responsible for:

- Instructing the operating personnel
- Maintaining the safe operation of the machine
- Adhering to all regulations and directives for labor protection and safety at work
- Regular testing by competent personnel (see chapters 3 and 3.2)

3.4 Exemption of liability

Leuze electronic GmbH + Co. KG is not liable in the following cases:

- Safety interface is not used as intended.
- Safety notices are not adhered to.
- Reasonably foreseeable misuse is not taken into account.
- Mounting and electrical connection are not properly performed.
- Proper function is not tested.
- Changes (e.g., constructional) are made to the safety interface.

3.5 Connection of E-STOP buttons

- It must be ensured that the EMERGENCY STOP function is always and immediately effective. In chapter 6 "Connection examples", there is a particular example illustrating the connection of a two-channel E-STOP button.
- E-STOP buttons connected to the MSI act only on the safety circuit to which the AOPD is assigned. Thus, it can be considered to be an area E-STOP. The limited sphere of action of the button is to be clearly marked for the operating personnel.

4 System design and functions

4.1 System design

Two microprocessors handle the redundant processing of the signal sequences within the intelligent modular safety interface MSI. The results of the two processors are continuously compared. If any deviations are found, the safety-related outputs are immediately switched off and the LED indicating an MSI failure lights up.

Sensor signals at inputs S1 and S2 as well as S3 and S4 are checked. Depending on which of the functions (as described below) are selected, when the protective fields of all connected AOPDs are free, the MSI outputs switch automatically to the ON state (without start/restart interlock) or remain in the OFF state until the reset button has been pressed and released (with start/restart interlock = standard operating mode).

On the output side, the MSI-sx/Rx is equipped with two positive-guided normally open contacts and one positive-guided normally closed contact and offers an additional normally open contact SSD (Secondary Switching Device) which assumes the ON state when the MSI-sx/Rx is ready for operation.


⚠ ATTENTION!	
	The SSD contact does not open when a protective field is interrupted! It may be used to switch off a second circuit in the event of a fault of the MSI.

The MSI safety interface comes in a 35 mm-wide slide-in housing that holds the MSI-sx module and the output module. It is suitable for mounting on a grounded 35 mm standard rail.

4.2 DIP switch settings

4.2.1 MSI-sx module DIP switch

To reset the DIP switches: cut off the voltage supply to the interface (see chapter "Safety Notices"), loosen the mounting tabs of the component with the imprint "MSI-sx" and pull this module partly out of the housing:

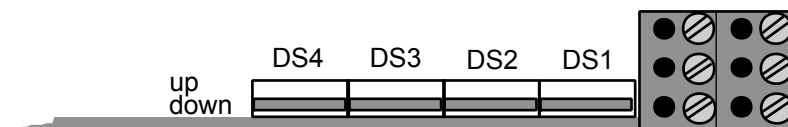

Functions **only** in conjunction with external wiring, see Chapter 4.3:


DIP switch	DS4	DS3	DS2	DS1
Function	With-out	Lock	Contactor monitoring	Without
Up		Start interlock only	Static* - none**	–
Down		Start/restart interlock* - none**	Dynamic	–

Factory setting: all switches down

- * See chapter 4.3.1.1 – 4.3.1.3
- ** See chapter 4.3.1.4
- See chapter 4.3.1.2
- See chapter 4.3.1.3 – 4.3.1.5

4.2.2 Rx output DIP switch

To reset the DIP switches: cut off the voltage supply to the interface (see chapter "Safety Notices"), loosen the mounting tabs of the component with the imprint "Rx" and pull this module partly out of the housing:

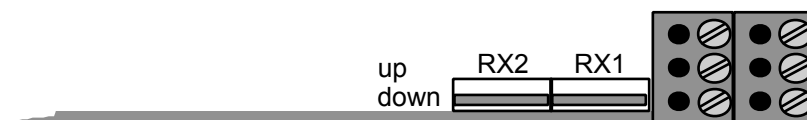

DIP switch	RX2	RX1
------------	-----	-----

Function	Warning: 1,000,000 switching cycles performed	
Up		
Down	x	x

DIP switch	RX2	RX1
Function	Warning: 500,000 switching cycles performed	
Up	x	
Down		x

DIP switch	RX2	RX1
Function	Warning: 200,000 switching cycles performed	
Up		x
Down	x	

DIP switch	RX2	RX1
Function	Warning: 100,000 switching cycles performed	
Up	x	x
Down		

Factory setting: All switches down (warning after 1,000,000 switching cycles)

Recommended setting: See chapter 4.3.2

4.3 Operating modes and functions

4.3.1 Operating modes – interlocking and contactor monitoring functions

The following 5 combinations can be selected by externally wiring the MSI safety interface and/or by changing the settings of the DIP switches DS2 and DS3 in the MSI module:

OPERATING MODES		
Chapter	Type of locking	Type of contactor monitoring
4.3.1.1	With start/restart interlock	With dynamic contactor monitoring
4.3.1.2	With start/restart interlock	With static contactor monitoring
4.3.1.3	With start/restart interlock	Without contactor monitoring
4.3.1.4	Without start/restart interlock	Without contactor monitoring
4.3.1.5	With start/without restart interlock	Without contactor monitoring

⚠ ATTENTION!	
	The MSI safety interface is factory-set for the operating mode "with start/restart interlock and dynamic contactor monitoring function". If this setting is changed, these functions (i.e. the appropriate safety level) must be guaranteed by other means.

- Types of interlocking functions

The "start interlock function" ensures that when the system is switched on or when the supply voltage returns, even if the protective field is free, the safety-related output contacts (OSSDs) do not

automatically go into ON state, but only after the reset button has been pressed and released. The "start/restart interlock function" prevents the OSSDs from automatically entering the ON state when the protective fields of one or more of the connected AOPDs are released again after an interruption. Here as well, the reset button must be pressed and released to initiate the system.

- Types of contactor monitoring

The function "dynamic contactor monitoring" monitors the contactors and relays connected downstream from the MSI safety interface. Each time before the OSSDs switch to the ON state, a check is made of whether the subsequent circuit elements have closed and reopened. If they have not, the OSSDs of the MSI safety interface remain in the OFF state. If the function "static contactor monitoring" is selected, a check is made of whether the subsequent switching elements are in an open state. If they are, the start/restart interlock can be unlocked.

4.3.1.1 Operating mode: with start/restart interlock – with dynamic contactor monitoring


External wiring requirements:

Terminal 13 "Reset"	Connected to 24 V DC supply via a start button
Terminal 14 "EDM"	Connected to 0 V via feedback contacts of the positive-guided downstream relay

Required DIP switch settings in the MSI module (chapter 4.2):

DS3 down DS2 down (factory setting on delivery)

Start/restart interlock is no longer active when the protective fields of all connected AOPDs are free, the downstream relays have returned to their original state, and the reset button is pressed and released.

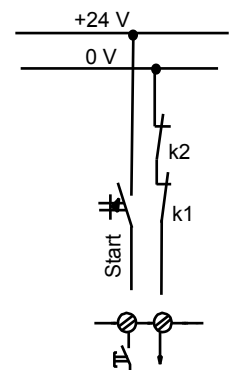

4.3.1.2 Operating mode: with start/restart interlock – with static contactor monitoring


External wiring requirements:

Terminal 13 "Reset"	Connected to 24 V DC supply via a start button
Terminal 14 "EDM"	Connected to 0 V via feedback contacts of the positive-guided downstream relay

Required DIP switch settings in the MSI module (chapter 4.2):

DS3 down DS2 up

In this operating mode, if the protective fields are free, a check is made of whether the downstream switching elements have returned to their original state. If so, a release is issued by pressing and releasing the reset button.

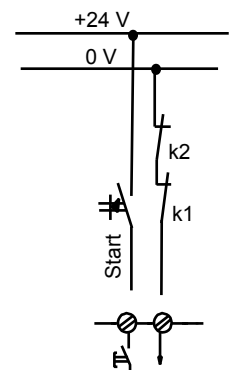

⚠ ATTENTION!



The dynamic monitoring of the downstream relays, which may be required in order to maintain the safety category, must be performed by other means.

4.3.1.3 Operating mode: with start/restart interlock – without contactor monitoring


External wiring requirements:

Terminal 13 "Reset" Connected to 24 V DC supply via a start button

Terminal 14 "EDM" Connected to 0 V

Required DIP switch settings in the MSI module (chapter 4.2):

DS3 down DS2 up

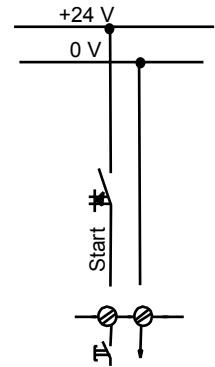

⚠ ATTENTION!	
	The monitoring of the downstream switching elements, which may be required in order to maintain the safety category, must be performed by other means.

4.3.1.4 Operating mode: without start/restart interlock – without contactor monitoring


External wiring requirements:

Terminal 13 "Reset" Connected to 0 V

Terminal 14 "EDM" Connected to 24 V DC

Required DIP switch settings in the MSI module (chapter 4.2):

DS3 down DS2 up

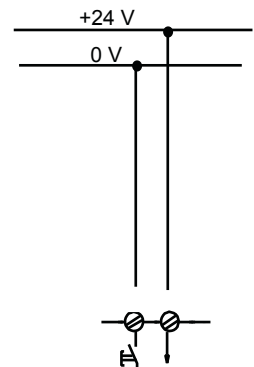

⚠ ATTENTION!	
	After the supply voltage is applied, the OSSDs immediately go into the ON state if all of the protective fields of the connected AOPDs are free. The start/restart interlock function and the monitoring of the downstream switching elements, which may be required in order to maintain the safety category, must be performed by other means.

4.3.1.5 Operating mode: with start/without restart interlock – without contactor monitoring

External wiring requirements:

Terminal 13 "Reset" Connected to 0 V


Terminal 14 "EDM" Connected to 24 V DC

Required DIP switch settings in the MSI module (chapter 4.2):

DS3 up

DS2 up

After the supply voltage is applied, the OSSDs remain in the OFF state even if all of the protective fields of the connected AOPDs are free.

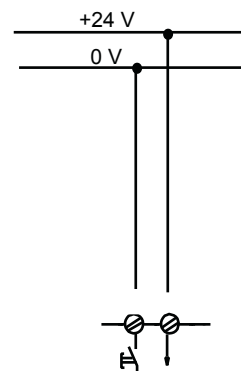

⚠ ATTENTION!	
	When the protective fields of all connected AOPDs are initially free, the OSSDs first enter the ON state when the protective field of the AOPD connected at S1 (for type 4: S1 and S2) is interrupted and released. Only then do the rest of the connected AOPDs respond to the interruption and release of their own protective fields by switching the OSSDs directly to the OFF and ON states. The restart interlock function and the monitoring of the downstream switching elements, which may be required in order to maintain the safety category, must be performed by other means.

4.3.2 Relay switching cycle monitoring function with prefailure message (in /Rx versions)

For purposes of preventive maintenance, the /Rx output assemblies are equipped with a function that counts the number of relay switching cycles and issues a prefailure message. Four different values can be selected at the DIP switches on the assembly. Before the DIP switches can be set, the Rx assembly must be released from its two holding brackets with a screwdriver and pulled slightly out of the housing.


The table below shows the recommended DIP switch settings with respect to the switching current. Switching voltages of up to 60 V DC and 250 V AC are admissible.

OSSD switching current (switching voltage 60 V DC, 250 V AC max.)	≤ 0.75 A	> 0.75 A ≤ 1.5 A	> 1.5 A ≤ 3 A	> 3 A ≤ 5 A
Recommended number of switching cycles	1,000,000	500,000	200,000	100,000

For DIP switch settings, see chapter 4.2.2

4.4 Indicators

A number of LEDs of various colors indicate the operating state of the MSI modular safety interface. It is also possible to show the indicators and input/output states on the PC monitor using the integrated RS 232 interface and diagnostic connector.

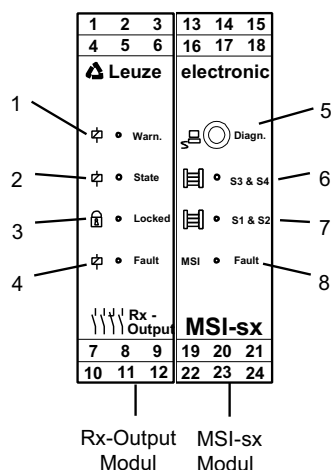


Output /Rx					
Position	Display/function	Icon	Status	LED	Color
1	Relay switching cycles	Relay/Warn	Reached Not reached	On Off	Red
2	Switching state Safety output	Relay	On Off	On On	Green Red
3	Start/restart interlock	Lock	Locked Not locked	On Off	Yellow
4	Error in output module	Relay	Error No error	On Off	Red

MSI-sx module					
Position	Display/function	Icon	Status	LED	Color
5	Diagnosis, RS 232 See signal outputs	Socket Diagn.	N/A	N/A	N/A
6	Protective field	AOPDs S3 & S4	Protective field free Not free	On Off	Green
7	Protective field	AOPDs S1 & S2	Protective field free Not free	On Off	Green
8	MSI error	MSI Fault	Error No error	On Off	Red

4.5 Signal outputs

⚠ ATTENTION!	
	Signal outputs are not allowed to be used as safety-related signals in release circuits (see also chapter Safety Notices, Operating conditions and approved purpose).

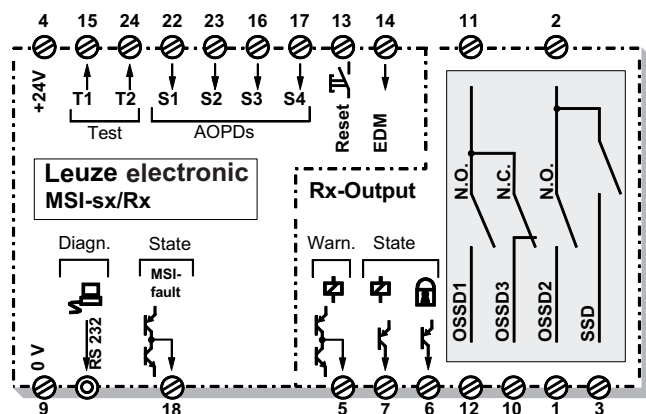

Output /Rx				
Terminal	Signaling function	Icon	Status	Signal output
5	Warning output switching cycles	Relay	Not reached Reached	Active high Active low
6	Start/restart interlock	Lock	Locked Not locked	Active high Active low
7	Switching state Safety output	Relay	ON OFF	Active high Active low

MSI-sx module				
Terminal	Signaling function	Icon	Status	Signal output
Front socket	Diagnosis, RS 232 2.5 mm connector	—	—	Connection to PC with diagnosis program
18	MSI error	MSI-fault	No error Error	Active high Active low


4.6 Diagnostics function

Requirements for running the diagnosis system: a standard PC or laptop operating under Windows (Version 3.1 or higher) and the MSI software, Version 01, as well as a serial connection cable and a 2.5 mm jack plug.

- Simultaneous display of all input and output states as well as all LED displays on the MSI

With its diagnosis interface, the intelligent modular safety interface MSI offers a convenient way to visualize all of the input and output states simultaneously on the monitor. The connection diagram as well as display fields in different colors can be shown via the connection terminals. A graphic representation of the MSI front design with the display elements as described in chapter 4.4 also appears on the screen.

Example:

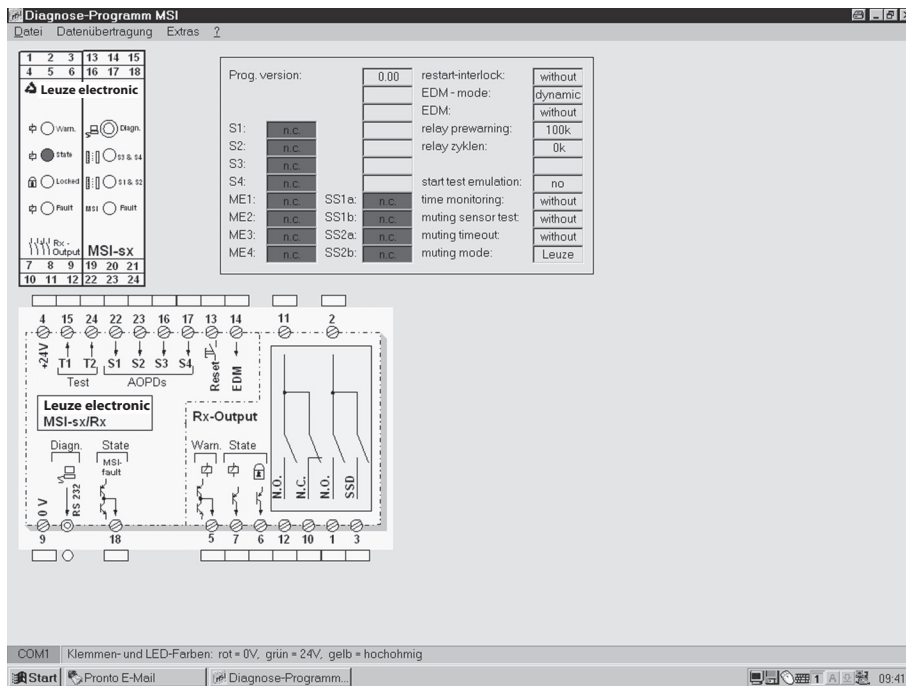

This enables the sequences at individual screw terminals to be tracked without the use of additional measuring instruments. The diagnostics function is equipped with online help and can be operated in either English or German.

5 Electrical connection

5.1 Installation instructions

⚠ ATTENTION!	
	The general Safety Notices in chapter 3 must be observed. The electrical installation may only be performed by trained specialists and if there is no voltage applied.
⚠ ATTENTION!	
	In the R/Rx versions, it is possible that high voltages may be applied at the output contacts. A de-energized state is achieved only when the 24 V DC supply voltage as well as the supply lines to the switching contacts are safely switched off and secured against being switched on again.
⚠ ATTENTION!	
	Coded plug-in terminal blocks allow a connection cross-section of up to 2.5 mm ² . The supply voltage must be externally fused against overcurrent with a fuse of 2.5 A mT. The switching contacts must also be externally fused against overcurrent with a maximum of 4 A gG. This prevents the safety-related contacts from welding together if the current load is too high!

5.2 Power supply requirements

⚠ ATTENTION!	
	The supply voltage of 24 V DC must guarantee safe mains separation and be able to bridge a voltage dip of 20 ms at full load. The functional earth connection of the MSI is established when snapped onto the grounded metal mounting rail via the rear clamping device. ↳ The supply line for the supply voltage must be externally fused against overcurrent with a maximum of 2.5 A mT.

5.3 Connecting AOPDs, type 4 or type 2

The examples below show possibilities for connecting and combining AOPDs of various safety categories and with various output features (relays, safety-oriented transistor outputs, cross circuit monitoring within and outside the AOPD).

AOPDs of type 4 with transistor outputs and cross circuit monitoring function can be connected directly to the safety inputs S1 and S2 of S3 and S4. See example 1.

All available safety inputs must be occupied! In case no components are connected, the remaining sensor inputs must be connected to the corresponding test signal using bridges. In doing so, please note that the even-numbered test signal must be connected to the even-numbered sensor input via the non-delaying bridge (T2 => S2 or S4) and vice versa (T1 => S1 or S3). See example 2.

AOPDs of type 4 with relay outputs, safety switches or E-STOP buttons must be connected so that the odd-numbered test signal T1 is directed via the non-delaying contacts to the odd-numbered sensor inputs (T1 => S1 or S3) and vice versa (T2 => S2 and S4). See examples 3 and 4.

AOPDs of type 2 are periodically tested using the time-delayed test signals T1 or T2. The even-numbered test signal must be directed to an odd-numbered safety input via the time-delaying sensor (T2 => S1 or S3) and vice versa (T1 => S2 and S4). The sensor response time to a test request must be in a range of 2 to 18 ms. See examples 5 and 6.


⚠ ATTENTION!	
	Using both the inputs S1 & S2 and S3 & S4, separate insulated supply lines must be used because cross circuits are monitored between S1 and S2 as well as S3 and S4, not, however, between S1 and S3 and S2 and S4.

If type 2 AOPDs are connected:

- According to EN 61496-1, only a maximum of PL c or SIL CL 1 can be achieved!
- When cables are laid without protection (e.g. S1 & S2 only or S3 & S4 only), an error detection time of up to 10 s is possible.


Example 1

2 AOPD of type 4 with 2 safety-related transistor outputs each and internal cross circuit monitoring function.

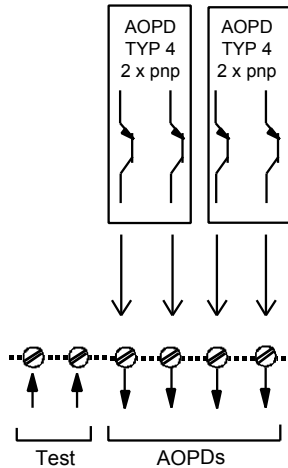


Example 2

1 AOPD of type 4 with 2 safety-related transistor outputs and internal cross circuit monitoring function.

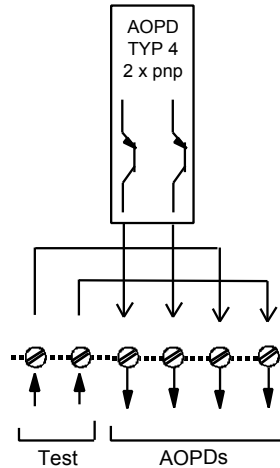


Example 3

2 AOPD of type 4 with 2 normally open contacts each. Separated connection cables to the individual AOPDs are required.

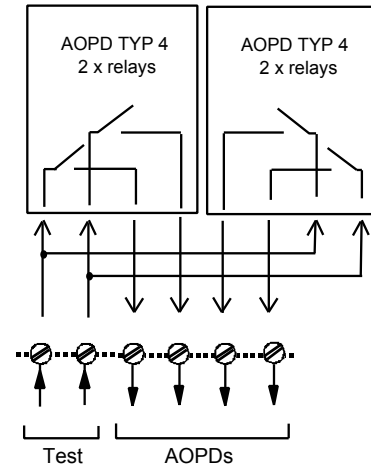


Example 4

1 AOPD of type 4 with 2 normally open contacts and door safety switch. Separated connection cables to the AOPD and the safety switch are required.

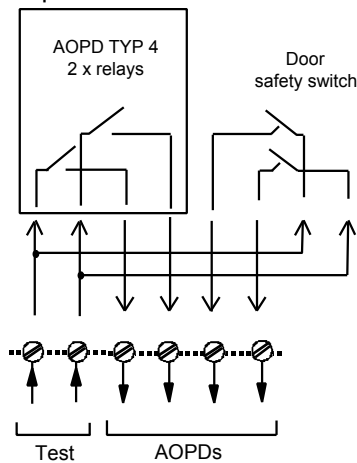


Example 5

3 AOPD of type 2 with one safety-related transistor output each. Separated connection cables to the individual AOPDs are required.

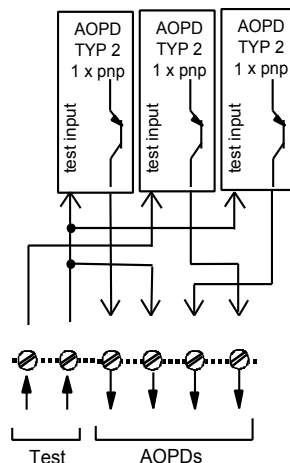

Example 6

4 AOPD of type 2 with one safety-related transistor output each. Separated connection cables to the individual AOPDs are required.

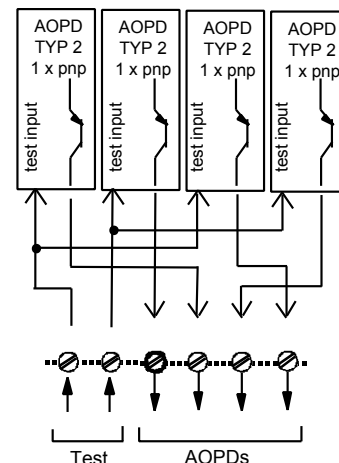

5.4 Connecting to the machine control

⚠ ATTENTION!




The safety-related parts of the controls comprise more than the MSI-sx/Rx described above. They also include successive control elements and even power transmission elements which must be safely and promptly shut down. Special attention must be given here to the adherence to the required safety category. Important information on this topic can be found in EN ISO 13849-1:2015.


 ATTENTION!	
	Essential prerequisites for safe operation are the abilities to electrically influence the interruption of the dangerous movement and to bring the machine to a standstill as quickly as possible. These factors, as well as the reaction times of AOPDs and the MSI, must be taken into consideration when calculating the safety distance. The reaction times depend on the type of AOPD selected (see chapter 7, Technical data). Other parameters, such as access speed or additional distance to be added to the safety distance, are dependent on the respective applications and the resolution of the used AOPD. European standard EN ISO 13855 includes calculation formulas and examples for various arrangements.

6 Connection examples

The connection examples below show a wiring suggestion for the MSI-sx/Rx as well as a connection example for an E-STOP button.

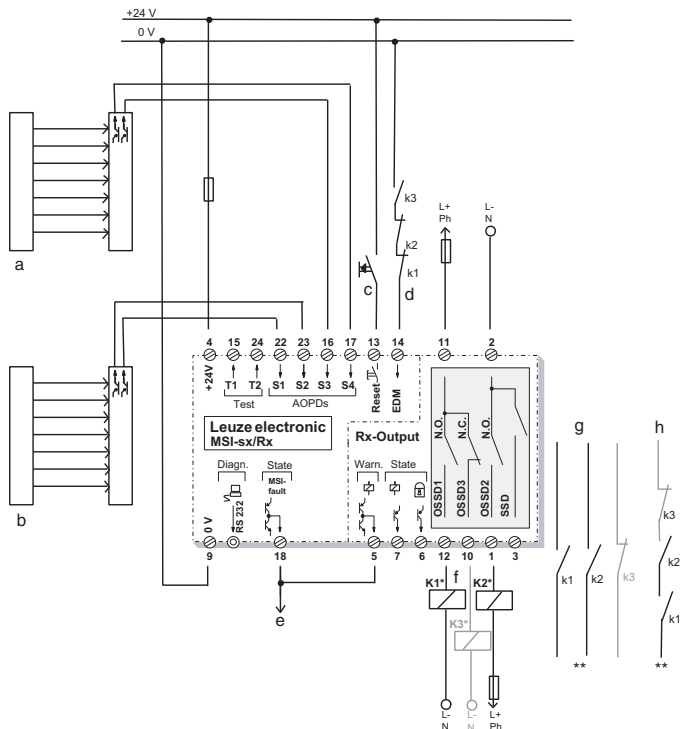

Connection example MSI-sx/Rx with two AOPD type 4

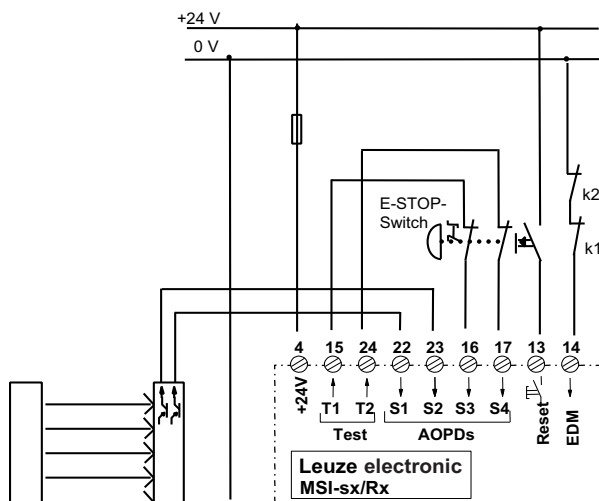

Example: Connection of two-channel E-STOP button

- a = AOPD Type 4
- b = AOPD Type 4
- c = Command device for release (start/restart interlock)
- d = Feedback circuit for contactor monitoring
- e = Possible collector cable for warning/error indications
- Pin 18 = Signal output "MSI error"
- Pin 5 = Relay prefailure message
- Pin 7 = Signal output "switching state of safety output "
- Pin 6 = Signal output "interlock state"
- f = Safety-related switching outputs (OSSDs)

- Pin 3 = Secondary switch-off circuit SSD (opens in case of MSI failure)
- g = Two-channel (three-channel) release circuit
- h = One-channel release circuit
- * = Use suitable spark extinction circuits
- ** = Always use at least two contacts in the release circuit. Only use sequential contactors with positive-guided contacts.

All available safety inputs must be occupied!

See chapter 5.3.

7 Technical data and order guide

7.1 MSI-sx

Version, type Modular Safety Interface	MSI-sx
Type in accordance with EN 61496-1	Type 4
SIL in accordance with EN 61508	SIL 3
Performance Level (PL) in accordance with EN ISO 13849-1:2015	PL e
Category in accordance with EN ISO 13849-1:2015	Cat. 4
Mean probability of a dangerous failure per hour (PFH _d) as a function of the mean number of annual switching cycles of the relay n _{op} *	100% Load n _{op} = 4,800: 1.6 x 10 ⁻⁰⁸ 1/h 60% Load n _{op} = 4,800: 1.3 x 10 ⁻⁰⁸ 1/h 100% Load n _{op} = 28,800: 3.8 x 10 ⁻⁰⁸ 1/h 60% Load n _{op} = 28,800: 1.6 x 10 ⁻⁰⁸ 1/h 100% Load n _{op} = 86,400: 9.5 x 10 ⁻⁰⁸ 1/h 60% Load n _{op} = 86,400: 2.4 x 10 ⁻⁰⁸ 1/h
Number of cycles until 10% of the components have a failure to danger (B10 _d)	400,000: 100% of the max. switching current of loading cases AC1, DC1, AC15, DC13 2,500,000: 60% of the max. switching current of loading cases AC1, DC1, AC15, DC13 20,000,000: 20% of the max. switching current of loading cases AC1, DC1, AC15, DC13
Mission time (T _M)	20 years
Connectable safety sensors at S1 – S4	Up to 2 AOPD of type 4, type 3 or up to 4 AOPDs of type 2 (all in acc. with EN 61496-1)
Connectable safety switches and command devices at S1-S4	Interlock devices according to EN ISO 14119 Area E-Stop button according to EN ISO 13850
Test outputs T1 and T2, test interval Test impulse duration, time-delayed Reaction time, AOPD of type 2 on test request	200 ms 24 ms each 2 to 18 ms
Available functions	Start/restart interlock Contactor monitoring
Control input Start/restart interlock (reset)	Potential-free normally open contact (button or key switch)
Control input Contactor monitoring (EDM)	Feedback of positive-guided contacts of sequential contactors (see connection diagram)
Signal output MSI error	Push-pull transistor output No MSI error Active high, 24 V DC, 60 mA max. MSI error Active low
Safety outputs (Technical data, see below)	Relay outputs Via /Rx output
Supply voltage	24 V DC, ± 20%, external power supply unit (PELV) with safe mains separation and equalization for 20 ms voltage dip required


Current consumption	Approx. 200 mA without external load
External fuse (power supply)	2.5 A mT
Housing Degree of protection	IP 20; installation in switch cabinet or housing with degree of protection of at least IP 54 Mounting on 35 mm standard top-hat rail
Protection class	III
Ambient temperature, operation	0 ... + 55 °C
Ambient temperature, storage	-25 ... + 70 °C
Relative humidity	93 % max.
Connection technology (GS-ET-20: 2014)	Pluggable, coded screw terminals Cable cross section min., rigid, flexible: 0.14 mm ² Cable cross section max., rigid, flexible: 2.5 mm ² Cable cross section AWG/kcmil, min./max.: 26/14 Cable cross section UL AWG/kcmil: 30-12
Dimensions	See dimensional drawing
*n_{op} = mean number of annual actuations, see C.4.2 and C.4.3 of EN ISO 13849-1:2015 Use the following formula to calculate the mean number of annual actuations: $n_{op} = (d_{op} \cdot h_{op} \cdot 3600 \text{ s/h}) \div t_{Zyklus}$ In doing so, make the following assumptions with regard to the use of the component: h_{op} = mean operating time in hours per day d_{op} = mean operating time in days per year t_{cycle} = mean operating time between the start of two successive cycles of the component (e.g switching of a valve) in seconds per cycle	

7.2 /Rx output

OSSD safety outputs	2 safety-related normally open contacts, 60 V DC, 250 V AC, 5 A max. 1 safety-related normally closed contact, 60 V DC, 250 V AC, 5 A max.
Switching voltage/switching current	Minimum switching current 20 mA
Safety outputs protection class	II
Rating voltage for safety outputs	Overvoltage category 3 / 300 V AC
OSSD external fuse (EN 60269-1)	4 A gG D-fuse
Contact currents (EN 60947-5-1)	AC15, 3 A DC13, 2 A
OSSD reaction time MSI (without AOPD)	For AOPD type 4, transistor output 22 ms For AOPD type 4, relay output 64 ms For AOPD type 2 64 ms For safety switches (electro-mechanical) 64 ms
OSSD restart delay time	> 100 ms
OSSD-suitable spark extinction via the coils of the downstream relays	Required

SSD secondary switching device (closes after successful MSI start test, opens in case of failure) Switching voltage/switching current	1 normally open contact, 60 V DC, 250 V AC, 5 A max. Minimum switching current 20 mA			
SSD external fuse SSD (Secondary Switching Device) not to be used for safety circuit!	 5 A mT			
Do not use "Status of switching out- puts" signal output for safety circuit!	 pnp switching output OSSDs ON state: Active high, 24 V DC, 100 mA max. OSSDs OFF state: Active low			
Signal output "State of start/restart interlock"	pnp switching output Locked: Active high, 24 V DC, 100 mA max. Not locked: Active low			
OSSD currents over the contacts at 230 V AC switching voltage	≤ 0.75 A	> 0.75 A ≤ 1.5 A	> 1.5 A ≤ 3 A	> 3 A ≤ 5 A
Recommended limit of switching cycles can be set via DIP switch of Rx module (factory setting 1,000,000)	1,000,000	500,000	200,000	100,000
Signal output "Warning – Preset switching cycles reached"	Push-pull transistor output Switching cycles not reached: Active high, 24 V DC, 60 mA Switching cycles reached: Active low			

7.3 Dimensioned drawing

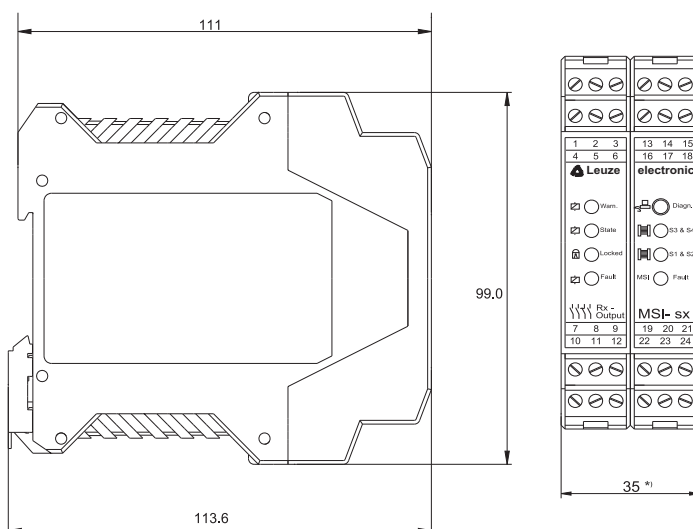

*) Stringing together without distance possible

7.4 Order guide

Type	Order no.
MSI-sx/Rx	549901
MSI diagnostic software	549930
Diagnostics cable 3 m	549953

Diagnostics cable 5 m	549955
/Rx output assembly (replacement part)	509211

8 EC Declaration of Conformity

Leuze

EU-/EG-
KONFORMITÄTS-
ERKLÄRUNGEU/EC
DECLARATION OF
CONFORMITYDECLARATION
UE/CE DE
CONFORMITE

Hersteller:

Manufacturer:

Constructeur:

Leuze electronic GmbH + Co. KG
In der Braike 1, PO Box 1111
73277 Owen, Germany

Produktbeschreibung:

Description of product:

Description de produit:

**Modulares Sicherheits-
Interface**
**MSI (-s, -sx), (-i, -ix), (-m, -mx),
(-mE, -mxE)**
Serien Nr. siehe Typenschild

Modular Safety Interface
**MSI (-s, -sx), (-i, -ix), (-m, -mx),
(-mE, -mxE)**
Serial no. see name plate

Module d'interface de sécurité
**MSI (-s, -sx), (-i, -ix), (-m, -mx),
(-mE, -mxE)**
**numéro de série voir
plaque signalétique**

Die alleinige Verantwortung
für die Ausstellung dieser
Konformitätserklärung trägt
der Hersteller.

This declaration of conformity
is issued under the sole
responsibility of the
manufacturer.

La présente déclaration de
conformité est établie sous la
seule responsabilité du
fabricant.

Der oben beschriebene
Gegenstand der Erklärung
erfüllt die einschlägigen
Harmonisierungsrechts-
vorschriften der Union:

The object of the declaration
described above is in
conformity with the relevant
Union harmonisation
legislation:

L'objet de la déclaration décrit
ci-dessus est conforme à la
législation d'harmonisation de
l'Union applicable:

Angewandte EU-/EG-
Richtlinie(n):
2006/42/EG (*1)
2014/30/EU

Applied EU/EC Directive(s):
2006/42/EC (*1)
2014/30/EU

Directive(s) UE/CE
appliquées:
2006/42/CE (*1)
2014/30/UE

Angewandte harmonisierte Normen / Applied harmonized standards / Normes harmonisées appliquées:
EN ISO 13849-1:2015 (*1) EN ISO 13849-2:2012 EN 62061:2005
EN 60204-1:2006+AC:2010+A1:2009 +AC:2010+A1:2013+A2:2015

Angewandte technische Spezifikationen / Applied technical specifications / Spécifications techniques
appliquées:

EN 61496-1:2013+AC2015 (*1)

Notified Body

(*1) TÜV SÜD Product Service GmbH, Certification Body, Ridlerstraße 65, D-80339 Munich, NB 0123, Z10 068636 0038 Rev. 00

Dokumentationsbevollmächtigter ist der genannte Hersteller, Kontakt: quality@leuze.de.

Authorized for documentation is the stated manufacturer, contact: quality@leuze.de.

Autorisé pour documentation est le constructeur déclaré, contact: quality@leuze.de

2014/30/EU veröffentlicht: 29.03.2014, EU-Amtsblatt Nr. L 96/79-106; 2014/30/EU published: 29.03.2014, EU-Journal No. L 96/79-106; 2014/30/UE publié: Journal EU n° L 96/79-106

30.06.2020

Datum / Date / Date

[Signature]

Dr. Dr. Albrecht Pfeil
Director Business Unit Safety

[Signature]

A. Alexander Mielchen
Product Manager Safety

Leuze electronic GmbH + Co. KG
In der Braike 1
D-73277 Owen
Telefon +49 (0) 7021 573-0
Telefax +49 (0) 7021 573-199
info@leuze.de
www.leuze.com

Leuze electronic GmbH + Co. KG, Sitz Owen, Registergericht Stuttgart, HRA 230712
Persönlich haftende Gesellschafterin Leuze electronic Geschäftsführungs-GmbH,
Sitz Owen, Registergericht Stuttgart, HRB 230550
Geschäftsführer: Ulrich Balbach
USt-IdNr: DE 145912521 | Zollnummer 2554232
Es gelten ausschließlich unsere aktuellen Verkaufs- und Lieferbedingungen
Only our current Terms and Conditions of Sale and Delivery shall apply

LEO-ZQM-148-07-F0

DICHIARAZIONE DI
CONFORMITÀ
UE/CEDECLARACIÓN DE
CONFORMIDAD
UE/CEDECLARAÇÃO DE
CONFORMIDADE
UE/CE

Fabbricante:

Fabricante:

Fabricante:

Leuze electronic GmbH + Co. KG
In der Braike 1, PO Box 1111
73277 Owen, Germany

Descrizione del prodotto:

Descripción del producto:

Descrição do produto:

**Interfaccia di sicurezza
modulare**

**Interfaz de seguridad modular
MSI (-s, -sx), (-i, -ix), (-m, -mx),
(-mE, -mxE)**

**Interface de segurança
modular**

**MSI (-s, -sx), (-i, -ix), (-m, -mx),
(-mE, -mxE)**

**Número de serie ver etiqueta
de tipo**

**MSI (-s, -sx), (-i, -ix), (-m, -mx),
(-mE, -mxE)**

**Número de série veja etiqueta
de tipo**

La responsabilità per
l'emissione della presente
dichiarazione di conformità è
esclusivamente a carico del
fabbricante.

El único responsable de la
expedición de esta
declaración de conformidad
es el fabricante.

A responsabilidade pela
emissão desta declaração de
conformidade é
exclusivamente do fabricante.

Il summenzionato oggetto
della dichiarazione è
conforme alle norme
armonizzate applicabili
dell'Unione:

El objeto de la declaración
arriba descrito cumple la
legislación comunitaria de
armonización pertinente:

O objeto da declaração
descrito acima cumpre os
regulamentos legais de
harmonização aplicáveis da
União Europeia:

Direttiva(e) UE/CE
applicata(e):
2006/42/CE (*)
2014/30/UE

Directiva(s) UE/CE
aplicada(s):
2006/42/CE (*)
2014/30/UE

Diretiva(s) UE/CE aplicada(s):
2006/42/CE (*)
2014/30/UE

Norme armonizzate applicate / Normas harmonizadas aplicadas / Normas harmonizadas aplicadas:

EN ISO 13849-1:2015 (*)
EN 60204-1:2006+AC:2010+A1:2009

EN ISO 13849-2:2012

EN 62061:2005
+AC:2010+A1:2013+A2:2015

Specifiche tecniche applicate / Especificaciones técnicas aplicadas / Especificações técnicas aplicadas:

EN 61496-1:2013+AC2015 (*)

Notified Body

(*) TÜV SÜD Product Service GmbH, Certification Body, Ridlerstraße 65, D-80339 Munich, NB 0123, Z10 068636 0038 Rev. 00

Il responsabile per la documentazione è il fabbricante nominato, contatto: quality@leuze.de.

El apoderado de la documentación es el nombrado fabricante, contacto: quality@leuze.de.

O responsável pela documentação é o fabricante especificado, contato: quality@leuze.de.

2014/30/UE data di pubblicazione: 29.03.2014, Gazzetta ufficiale dell'Unione europea n. L 96/79-106; 2014/30/UE publicado: 29.03.2014, Diario Oficial de la Unión Europea L 96/79-106; 2014/30/UE publicado: 29.03.2014, Jornal Oficial da União Europeia L 96/79-106

30.06.2020

Data / Fecha / Data

ppa. Dr. Albrecht Pfeil
Director Business Unit Safety

i.A. Alexander Mielchen
Product Manager Safety

Leuze electronic GmbH + Co. KG
In der Braike 1
D-73277 Owen
Telefon +49 (0) 7021 573-0
Telefax +49 (0) 7021 573-199
info@leuze.de
www.leuze.com

LEO-ZQM-148-07-FO

Leuze electronic GmbH + Co. KG, Sitz Owen, Registergericht Stuttgart, HRA 230712
Persönlich haftende Gesellschafterin Leuze electronic Geschäftsführungs-GmbH,
Sitz Owen, Registergericht Stuttgart, HRB 230550
Geschäftsführer: Ulrich Balbach
USt-IdNr. DE 145912521 | Zollnummer 2554232
Es gelten ausschließlich unsere aktuellen Verkaufs- und Lieferbedingungen
Only our current Terms and Conditions of Sale and Delivery shall apply

EU/EC 符合性声明

EU/EC 준수선언서

EU-/EG-VERKLARING
VAN
OVEREENSTEMMING

制造商:

제조업체:

Fabrikant:

Leuze electronic GmbH + Co. KG
In der Braike 1, PO Box 1111
73277 Owen, Germany

产品介绍:

제품 설명:

Productbeschrijving:

模块化安全接口
**MSI (-s, -sx), (-i, -ix), (-m, -mx),
(-mE, -mxE)**
序列号请参见类型标签

모듈 식 보안 인터페이스
**MSI (-s, -sx), (-i, -ix), (-m, -mx),
(-mE, -mxE)**
일련 번호 유형 라벨 참조

Modulaire beveiligingsinterface
**MSI (-s, -sx), (-i, -ix), (-m, -mx),
(-mE, -mxE)**
Serienummer zie typeplaatje

制造商对于本一致性声明的签
发承担唯一的责任。

이 준수선언서는 제조업체의
단독 책임으로
발행되었습니다.

De verantwoordelijkheid voor
het opstellen van deze
conformiteitsverklaring ligt
uitsluitend bij de fabrikant.

本声明的上述适用对象符合欧
盟的统一立法规定:

위에서 설명한 선언 대상은
조합의 해당 지역 조화 규정을
준수합니다.

Het hierboven
gespecificeerde voorwerp van
de verklaring voldoet aan de
van toepassing zijnde
geharmoniseerde wettelijke
voorschriften van de
Europese Unie:

应用的 EU/EC 指令:

적용된 EU/EC 지침:

Toegepaste EU-/EG-
richtlijn(en):
2006/42/EG (*1)
2014/30/EU

2006/42/EC (*1)
2014/30/EU

2006/42/EU (*1)
2014/30/EU

应用统一标准 / 적용 조화 표준 / Toegepaste geharmoniseerde normen:

EN ISO 13849-1:2015 (*1)
EN 60204-1:2006+AC:2010+A1:2009

EN ISO 13849-2:2012

EN 62061:2005
+AC:2010+A1:2013+A2:2015

应用技术规范 / 응용 기술 사양 / Toegepaste technische specificaties:

EN 61496-1:2013+AC2015 (*1)

Notified Body

(*1) TÜV SÜD Product Service GmbH, Certification Body, Ridlerstraße 65, D-80339 Munich, NB 0123, Z10 068636 0038 Rev. 00
文档授权代理人: 联系方: quality@leuze.de.


문서 공인 책임자는 언급된 제조업체입니다. 연락처: quality@leuze.de.

Gevolmachtigde voor de documentatie is de genoemde fabrikant, contact: quality@leuze.de.

2014/30/EU 颁布日期: 2014 年 3 月 29 日. 欧盟官方公报编号 L 96/79-106; 2014/30/EU 발행: 2014.03.29, EU 공식 판보 No. L 96/79-106; 2014/30/EU gepubliceerd: 29-03-2014, EU publicatieblad nr. L 96/79-106

30.06.2020

日期 / 날짜 / Datum


Dr. Albrecht Pfeil
Director Business Unit Safety


i.A. Alexander Mielchen
Product Manager Safety

Leuze electronic GmbH + Co. KG
In der Braike 1
D-73277 Owen
Telefon +49 (0) 7021 573-0
Telefax +49 (0) 7021 573-199
info@leuze.de
www.leuze.com

LEO-ZQM-148-07-FO

Leuze electronic GmbH + Co. KG, Sitz Owen, Registergericht Stuttgart, HRA 230712
Persönlich haftende Gesellschafterin Leuze electronic Geschäftsführungs-GmbH,
Sitz Owen, Registergericht Stuttgart, HRB 230550
Geschäftsführer: Ulrich Balbach
USt-IdNr. DE 145912521 | Zollnummer 2554232
Es gelten ausschließlich unsere aktuellen Verkaufs- und Lieferbedingungen
Only our current Terms and Conditions of Sale and Delivery shall apply