# **△** Leuze electronic

the sensor people



MSI-s/R Modular Safety Interface



2015/08 - 603101 bject to change without or notice

# Notes on connection and operating instructions

These connecting and operating instructions contain information on the proper use of MSI Safety Interfaces in accordance with its intended purpose.



All the information contained herein, in particular the safety notes, need to be carefully observed.

Notes regarding safety and warnings are marked by this symbol / .



These connecting and operating instructions must be stored carefully. It must be available for the entire operating time of the MSI Safety Interfaces.

The Leuze electronic GmbH + Co. KG is not liable for damages caused by improper use. Acquaintance with these instructions is an element of the knowledge required for proper use.

© Reprints and reproduction, in whole or in part, are permitted only with the explicit permission of

Leuze electronic GmbH + Co. KG In der Braike 1 D-73277 Owen - Teck / Germany Telefon +49 (0) 7021 / 573-0 +49 (0) 7021 / 573-199 info@leuze de www.leuze.com

# **Table of contents**

| 1       | System Overview and Range of Applications                                  | 4  | 3.3.1.3 | Operating Mode: With Start/Restart Interlock - Without External Device    |    |
|---------|--|----|---------|---|----|
| 1.1     | General Information  |    |         | Monitoring  | 1  |
| 1.2     | Approvals  | 4  | 3.3.1.4 | Operating Mode: Without Start/Restart Interlock - Without External Device | Э  |
| 1.3     | Terms used   | 5  |         | Monitoring  | 1  |
| 1.4     | Nomenclature MSI-s/R   | 6  | 3.3.1.5 | Operating Mode: With Start/Without Restart Interlock - Without External   |    |
|         |  |    |         | Device Monitoring   | 10 |
| 2       | Safety   | 7  | 3.4     | Displays  | 1  |
| 2.1     | Approved purpose and foreseeable improper operation                        | 7  | 3.5     | Status Outputs  | 1  |
| 2.1.1   | Proper use   | 8  | 3.6     | Diagnosis System  | 1  |
| 2.1.2   | Foreseeable misuse   | 10 |         |   |    |
| 2.2     | Competent personnel  | 10 | 4       | Electrical Connection   | 2  |
| 2.3     | Responsibility for safety  | 10 | 4.1     | Installation Regulations  | 2  |
| 2.4     | Exemption of liability   | 11 | 4.2     | Power Supply Requirements   | 2  |
| 2.5     | Emergency STOP buttons to be connected                                     | 11 | 4.3     | Connecting AOPDs, Type 4 or Type 2  | 2  |
|         |  |    | 4.4     | Connecting Machine Controls   | 2  |
| 3       | System Configuration and Functions   | 12 |         |   |    |
| 3.1     | System Configuration   | 12 | 5       | Connection Circuit Diagram, Examples                                      | 2  |
| 3.2     | DIP Switch Settings  | 12 |         |   |    |
| 3.2.1   | DIP Switch Settings for the MSI-s Module                                   | 12 | 6       | Technical Data and Ordering Information                                   | 2  |
| 3.3     | Operating Modes and Functions  | 13 | 6.1     | MSI-s/R   | 2  |
| 3.3.1   | Operating Modes: Interlocking Functions and External Device                |    | 6.2     | /R-Output   | 2  |
|         | Monitoring   | 13 | 6.3     | Dimensional Drawing   | 3  |
| 3.3.1.1 | Operating Mode: With Start/Restart Interlock – With Dynamic External       |    | 6.4     | Ordering Information  | 3  |
|         | Device Monitoring  | 14 |         | -   |    |
| 3.3.1.2 | Operating Mode: With Start/Restart Interlock – With Static External Device | )  | 7       | EC Declaration of Conformity  | 3  |
|         | Monitoring   | 15 |         | •   |    |

# 1 System Overview and Range of Applications

#### 1.1 General Information

The Modular Safety Interface (MSI) serves as a link between one or more active optoelectronic protective devices (AOPD), Type 2, Type 3 or Type 4, and the machine controls. All MSI safety components include start/restart interlock and external device monitoring functions that can be activated and deactivated. They are also equipped with a series of status outputs and LED displays as well as a diagnosis interface to a PC.

# 1.2 Approvals

### **Europe**

EC Type Examination DIN EN ISO 13849-1/2 GS-ET-20 "Safety relays" IFA

Institut für Arbeitsschutz der Deutschen Gesetzlichen Unfallversicherung

D-53757 Sankt Augustin

Leuze electronic offers a range of additional MSI safety interfaces with standard and special function, e.g. muting or cyclical operation (single break, double break).

All MSI safety modules are equipped with relay outputs.

# 1.3 Terms used

| AOPD   | Active Optoelectronic Protective Device |
|--------|---|
| Diagn. | Diagnosis Function                      |
| EDM    | External Device Monitoring              |
| ESPE   | Electro-sensitive Protecting Equipment  |
| Fault  | Relay Fault                             |
| Locked | Start/Restart Interlock active          |
| N.O.   | Normal Open Contact                     |
| OSSD   | Safety-related switching output         |
| Reset  | Start/Restart Interlock Initiator       |

| Interface RS 232  |
|---|
| Safety input 1, 2   |
| Indication Protected fields free/interrupted  |
| Selection of Cyclical Operation   |
| Secondary Switching Device (switches to ON state when the MSI is ready for operation) |
| Test Signal Outputs   |
| Test signal Output 1, 2   |
|   |

# 1.4 Nomenclature MSI-s/R

| MSI | Modular Safety Interface  |
|-----|---|
| S   | standard: This version offers the following standard functions for either 1 AOPD, Type 4, or up to 2 AOPDs, Type 2: Start/restart interlock External device monitoring Diagnosis function |
| /R  | Relay output:  - two normal open safety contacts, OSSD 1 and OSSD 2   |

# 2 Safety

Before using the Safety Interface Device, a risk evaluation must be performed according to valid standards (e.g. ISO 14121, EN ISO 12100-1, ISO 13849-1, EN 62061). The result of the risk assessment determines the required safety level of the Safety Interface Device (see table in chapter 2.1.1). For mounting, operating and testing, document "MSI-s/R Modular Safety Interface Device" as well as all applicable national and international standards, regulations, rules and directives must be observed. Relevant and supplied documents must be observed, printed out and handed to the affected personnel.

Before working with the Safety Interface Device, completely read and understand the documents applicable to your task.

In particular, the following national and international legal regulations apply for the start-up, technical inspections and work with safety sensors:

• Machinery directive 2006/42/EC

- Low Voltage Directive 2006/95/EC
- Electromagnetic compatibility directive 2004/108/EC
- Use of Work Equipment Directive 89/655/EEC supplemented by Directive 95/63 EC
- OSHA 1910 Subpart 0
- Safety regulations
- Accident-prevention regulations and safety rules
- Ordinance on Industrial Safety and Health and Labor Protection Act
- Device Safety Act

For safety-related information you may also contact the local authorities (e.g., industrial inspectorate, employer's liability insurance association, labor inspectorate, occupational safety and health authority).

# 2.1 Approved purpose and foreseeable improper operation



## Warning!

A running machine can cause severe injuries!

Make certain that, during all conversions, maintenance work and inspections, the system is securely shut down and protected against being restarted again.

 $\overset{\circ}{\mathbb{I}}$ 

## 2.1.1 Proper use

The Safety Interface Device must only be used after it has been selected in accordance with the respectively applicable instructions and relevant standards, rules and regulations regarding labor protection and occupational safety, and after it has been installed on the machine, connected, commissioned, and checked by a competent person.

 When selecting the Safety Interface Device it must be ensured that its safety-related capability meets or exceeds the required performance level PLr ascertained in the risk assessment.

The following table shows the safety-related characteristic parameters of the MSI-s/R modular Safety Interface Devices.

| Type in accordance with DIN EN IEC 61496-1   | Type 4   |
|--|--|
| SIL in accordance with IEC 61508   | SIL 3  |
| Performance Level (PL) in accordance with DIN EN ISO 13849-1   | PL e   |
| Category in accordance with DIN EN ISO 13849-1   | Cat. 4   |
| Mean probability of a dangerous failure per hour (PFH $_{\rm d}$ ) as a function of the mean number of annual switching cycles of the relay ${\rm n_{op}}^{\star}$ | $\begin{array}{llllllllllllllllllllllllllllllllllll$ |

<sup>\*</sup>nop = mean number of annual actuations, see C.4.2 and C.4.3 of DIN EN ISO 13849-1:2008

Use the following formula to calculate the mean number of annual actuations:

$$n_{op} = (d_{op} \cdot h_{op} \cdot 3600 \text{ s/h}) \div t_{Zyklus}$$

In doing so, make the following assumptions with regard to the use of the component:

h<sub>op</sub> = mean operating time in hours per day

dop = mean operating time in days per year

to the component (e.g. switching of a valve) in seconds per cycles of the component (e.g. switching of a valve) in seconds per cycle

- The Safety Interface Device is used in combination with one or more Multiple Light Beam Safety Devices or Safety Light Curtains to safeguard danger or hazard areas.
- The control of the machine or system that is to be safeguarded must be electrically influenceable. A switch-off command initiated by an MSI must result in an immediate shutdown of the dangerous movement.
- The "Reset" acknowledgment button for unlocking the start/restart interlock must be mounted in such a way that the entire danger zone can be seen from its mounting location.
- Message outputs (state outputs) must not be used for switching safety-relevant signals.
- The Safety Interface Device is designed for installation in a cabinet or a protective housing with a protection rating of at least IP 54.
- The 24 V DC ±20% power supply must guarantee safe isolation from the mains voltage and be able to bridge a power outage period of 20 ms.
- Depending on external wiring, dangerous voltages may be present at the switching outputs. In addition to the power supply, these must be switched off and safeguarded against being switched back on prior to all work on the MSI-s.
- These operating instructions must be included with the documentation of the machine on which the protective device is installed so that they are available to the operator at all times.

- In the event of changes to the MSI-s, all warranty claims against the manufacturer of the Safety Interface Device are rendered void.
- The safety distance between the AOPD and the point of operation is to be maintained. It is calculated according to the formulas for machine-specific C standards or given in the general B1 standard ISO 13855. Both the reaction time of the Test Monitoring Unit and the braking time of the machine must be taken into account.
- Two switching contacts must always be looped into the switch-off circuit of the machine. To prevent welding, relay switching contacts must be fused/protected externally according to the technical data.
- The Safety Interface Device must be exchanged after a maximum of 20 years. Repairs or the exchange of parts subject to wear and tear do not extend the service life.
- The Safety Interface Device satisfies the requirements of safety category 4 acc. to ISO 13849-1. If, however, an AOPD of a lower safety category is connected, the total category for the given path of the control cannot be higher than that of the connected AOPD.
- Cross connections between S1 and S2 are only detected by the MSI safety device if both time-staggered test signal outputs, T1 and T2, are used for the connected protective device(s) with relay output. AODPs of type 4 with safety-relevant transistor outputs and their own cross circuit monitoring can be directly connected to S1 and S2.

#### 2.1.2 Foreseeable misuse

Any use other than that defined under the "intended use" or which goes beyond that use is considered improper use!

e.g.

applications in explosive or easily flammable atmospheres

## 2.2 Competent personnel

Prerequisites for competent personnel:

- has a suitable technical education
- he knows the rules and regulations for occupational safety, safety at work and safety technology and can assess the safety of the machine

## 2.3 Responsibility for safety

Manufacturer and operating company must ensure that the machine and implemented Safety Interface Device function properly and that all affected persons are adequately informed and trained.

The type and content of all imparted information must not lead to unsafe actions by users.



#### Attention!

Such instances can jeopardize the health and lives of the personnel operating the machinery and/or may cause damage to property.

- he knows the instructions for the Safety Interface Device and the machine
- has been instructed by the responsible person on the mounting and operation of the machine and of the Safety Interface Device

The manufacturer of the machine is responsible for:

- safe machine construction
- safe implementation of the Safety Interface Device
- imparting all relevant information to the operating company
- adhering to all regulations and directives for the safe starting-up of the machine

The operator of the machine is responsible for:

- instructing the operating personnel
- maintaining the safe operation of the machine

## 2.4 Exemption of liability

Leuze electronic GmbH + Co. KG is not liable in the following cases:

- Safety Interface Device is not used as intended
- · safety notices are not adhered to
- reasonably foreseeable misuse is not taken into account

## 2.5 Emergency STOP buttons to be connected

- It must be secured that the EMERGENCY STOP function is always and immediate effective. In Chapter 5, Connection examples, there is a particular example illustrating the connection of an EMERGENCY STOP button.
- When a two-channel Section Emergency Stop button is connected. MSI is able to realize a Section Emer-

- adhering to all regulations and directives for occupational safety and safety at work
- regular testing by competent personnel (see chapter 2.2 and 2)
- mounting and electrical connection are not properly performed
- proper function is not tested
- changes (e.g., constructional) are made to the Safety Interface Device

gency Stop function. Section Emergency Stop buttons connected to the MSI only affect the safety ciruit that is assigned to the AOPD. For this reason, it is referred to as an Section Emergency Stop. The limited area of effect of the button must be identified for the operating staff in a manner that is cleary visible.

# 3 System Configuration and Functions

## 3.1 System Configuration

Two microprocessors handle the redundant processing of the signal sequences within the intelligent Modular Safety Interface MSI. The results of the two processors are continuously compared. If any deviations are found, the safety-related outputs are immediately switched off and the LED indicating an MSI failure lights up.

Sensor signals at inputs S1 and S2 are checked. Depending on which of the functions (as described below) are selected, when the protected fields of all connected AOPDs are free the MSI outputs switch automatically to the ON state (without start/restart interlock) or remain in

3.2 DIP Switch Settings

## 3.2.1 DIP Switch Settings for the MSI-s Module

Cut off the voltage supply to the interface (see safety precautions) loosen the subassembly with the **imprint** 

the OFF state until the reset button has been pressed and released (with start/restart interlock = standard operating mode).

On the output side, the MSI-s is equipped with two positiveguided, normally open contacts.

The MSI safety interface comes in a 35 mm-wide slide-in housing that holds the MSI-s module and the /R output module. It is suitable for mounting on a grounded 35 mm standard rail.

"MSI-s" and pull this module partly out of the housing before resetting the DIP switches:



Functions **only** in conjunction with external wiring, see Chapter 3.3:

| DIP Switch | DS4  | DS3                               | DS2                        | DS1  |
|------------|------|-----------------------------------|----------------------------|------|
| Function   | None | Locking                           | External Device Monitoring | None |
| Up         |      | restart interlock only            | static•- none••            | -    |
| Down       |      | start/restart interlock* - none** | dynamic                    | -    |

Factory setting: all switches down

\* See Chapter 3.3.1.1 - 3.3.1.3

\*\* See Chapter 3.3.1.4

• See Chapter 3.3.1.2

•• See Chapter 3.3.1.3 - 3.3.1.5

## 3.3 Operating Modes and Functions

## 3.3.1 Operating Modes: Interlocking Functions and External Device Monitoring

The following 5 combinations can be selected by externally wiring the MSI Safety interface and/or by changing

the settings of the DIP switches DS2 and DS3 in the MSI Module:

|         | OPERATING MODES                      |                                     |  |  |  |
|---------|--------------------------------------|-------------------------------------|--|--|--|
| Chapter | Type of Locking                      | Type of External Device Monitoring  |  |  |  |
| 3.3.1.1 | With start/restart interlock         | with dynamic ext. device monitoring |  |  |  |
| 3.3.1.2 | With start/restart interlock         | with static ext. device monitoring  |  |  |  |
| 3.3.1.3 | With start/restart interlock         | without external device monitoring  |  |  |  |
| 3.3.1.4 | Without start/restart interlock      | without external device monitoring  |  |  |  |
| 3.3.1.5 | With start/without restart interlock | without external device monitoring  |  |  |  |



The MSI safety interface is factory-set for the operating mode "with start/restart interlock and dynamic external device monitoring". If this setting is changed, these functions (i.e. the appropriate safety level) must be guaranteed by other means.

- Types of interlocking functions
  - The start interlock function ensures that when the system is switched on or when the supply voltage returns, even if the protected field is free the safety-related output contacts (OSSDs) do not automatically go into ON state, but rather wait until the reset button has been pressed and let go. The start/restart interlock function prevents the OSSDs from automatically entering the ON state when the protected fields of one or more of the connected AOPDs are released again after an interruption. Here as well, the reset button must be pressed and let go to initiate the system.
- Types of External Device Monitoring
   The function dynamic external device monitoring monitors the relays connected downstream from the MSI safety interface. Each time before the OSSDs switch to the ON state, a check is made of whether the subsequent circuit elements have closed and reopened. If they have not, the OSSDs of the MSI safety interface remain in the OFF state. If the function static external device monitoring is selected, a check is merely made of whether the subsequent circuit elements are in an open state. If they are, the start/restart interlock can be initiated.

# 3.3.1.1 Operating Mode: With Start/Restart Interlock – With Dynamic External Device Monitoring

External wiring requirements:

Terminal 13 "Reset"

connected to 24 V DC by way of a

start button

Terminal 14 "EDM"


connected to 0 V by way of feedback contacts of the positiveguided downstream relav

Required DIP switch settings in the MSI module (Chapter 3.2):

DS3 down

DS2 down (factory setting at delivery)

Start/restart interlock is no longer active when the protected fields of all connected AOPDs are free, the downstream relays have returned to their original state, and the reset button is pressed and released.



# 3.3.1.2 Operating Mode: With Start/Restart Interlock - With Static External Device Monitoring

+24 V

0 V

Start

k2

k1

EDM

External wiring requirements:

Terminal 13 "Reset"

connected to

24 V DC by way of a

start button

Terminal 14 "EDM"

connected to 0 V by way of feedback contacts of the positiveguided downstream relay

Required DIP switch settings in the MSI module (Chapter 3.2):

DS3 down DS2 up

In this operating mode, if the protected fields are free, a check is merely made of whether the downstream circuit elements have returned to their original state. If so, a release is issued by pressing and letting go of the reset button.



The dynamic monitoring of the downstream relays, which may be required in order to maintain the safety category, must be performed by other means.

# 3.3.1.3 Operating Mode: With Start/Restart Interlock - Without External Device Monitoring

External wiring requirements:

Terminal 13 "Reset"

connected to 24 V DC by way of

a start button


Terminal 14 connected to 0 V "EDM"

Required DIP switch settings in the MSI module (Chapter 3.2):

DS3 down DS2 up



The dynamic monitoring of the downstream relays, which may be required in order to maintain the safety category, must be performed by other means.



### 3.3.1.4 Operating Mode: Without Start/Restart Interlock – Without External Device Monitoring


External wiring requirements:

Terminal 13 connected to 0 V "Reset"

Terminal 14 connected to "EDM" 24 V DC

Required DIP switch settings in the MSI module (Chapter 3.2):

DS3 down DS2 up



+24 V

0 V



After the supply voltage is applied, the OSSDs immediately go into the ON state if all of the protected fields of the connected AOPDs are free. In this case, the start/restart interlock

function and the dynamic monitoring of the downstream relays, which may be required in order to maintain the safety category, must be performed by other means.

# 3.3.1.5 Operating Mode: With Start/Without Restart Interlock – Without External Device Monitoring

External wiring requirements:


Terminal 13 connected to 0 V "Reset"

Terminal 14 connected to "FDM" 24 V DC

Required DIP switch settings in the MSI module (Chapter 3.2):

DS3 up DS2 up

After the supply voltage is applied, the OSSDs remain in the OFF state even if all of the protected fields of the connected AOPDs are free.

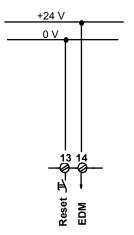




When the protected fields of all connected AOPDs are initially free, the OSSDs first enter the ON state when the protected field of the AOPD connected at S1 (for Type 4: S1 and S2) is interrupted and released. Only then do the rest of the connected AOPDs respond to the interruption and release of their own protected fields by switching the OSSDs directly to the OFF and ON states.

In this case, the restart interlock function and the dynamic monitoring of the downstream circuit elements, which may be required in order to maintain the safety category, must be performed by other means.

# 3.4 Displays

A number of LEDs of various colors indicate the operating status of the MSI modular safety interface. It is also possible to show the LED displays on the PC monitor

using the integrated RS 232 interface and diagnosis connector.

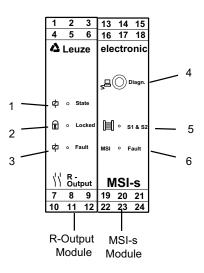


| Output /R |                              |        |                      |           |              |
|-----------|------------------------------|--------|----------------------|-----------|--------------|
| Position  | Display/Function             | Symbol | Status               | LED       | Color        |
| 1         | Safety-related switch output | relay  | ON<br>OFF            | on<br>on  | green<br>red |
| 2         | Start/restart interlock      | lock   | locked<br>not locked | on<br>off | yellow       |
| 3         | Fault in output module       | relay  | fault<br>no fault    | on<br>off | red          |

| MSI-s Module |   |                  |                               |           |       |
|--------------|---|------------------|-------------------------------|-----------|-------|
| Position     | Display/Function                        | Symbol           | Status                        | LED       | Color |
| 4            | Diagnosis, RS 232<br>See status outputs | jack<br>diagn.   | none                          | none      | none  |
| 5            | Protected field                         | AOPDs<br>S1 & S2 | protected field free not free | on<br>off | green |
| 6            | MSI Fault                               | MSI Fault        | fault<br>no fault             | on<br>off | red   |

# 3.5 Status Outputs

Status outputs are not allowed to be used as safety-related signals in release circuits

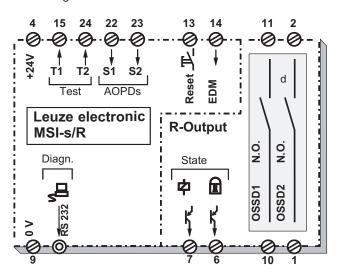

(see also Chapter Safety. Operating Conditions and Proper Use).

| Output /R |                              |        |                      |                        |  |
|-----------|------------------------------|--------|----------------------|------------------------|--|
| Terminal  | Message Function             | Symbol | Status               | Status Output          |  |
| 6         | Start/restart interlock      | lock   | locked<br>not locked | active high active low |  |
| 7         | Safety-related switch status | relay  | ON<br>OFF            | active high active low |  |

| MSI-s Module | MSI-s Module                                |        |        |  |  |
|--------------|---|--------|--------|--|--|
| Terminal     | Message Function                            | Symbol | Status | Status Output                          |  |
| Front jack   | Diagnosis, RS 232<br>2.5 mm round connector | _      | _      | connected to PC with diagnosis program |  |

## 3.6 Diagnosis System

Requirements for running the diagnosis system: a standard PC or laptop operating under Windows (Version 3.1 or higher) and the MSI software, Version 01, as well as a serial connection cable and a 2.5 mm jack plug.


 Simultaneous display of all input and output statuses as well as all LED displays on the MSI

With its diagnosis interface, the intelligent modular safety interface MSI offers a convenient way to visualize all of

the input and output statuses simultaneously on the monitor.

The connection circuit diagram as well as display fields in different colors can be shown on the screen via the connection terminals. A graphic representation of the MSI front design with the display elements as described in Chapter 3.4 also appears on the screen.

## Example:

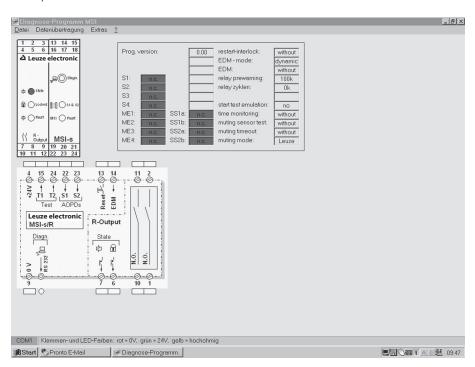

This enables the sequences at individual screw-type terminals to be tracked without the use of additional measuring instruments. The diagnosis function is equip-

ped with on-line help and can be operated in either English or German.

## 4 Electrical Connection

## 4.1 Installation Regulations



The general safety precautions in Chapter 2 must be observed. The electrical installation may be performed only if there is no voltage applied, and it must be performed by trained specialists.



In the /R versions, it is possible that high voltages may be present at the output contacts. A no-voltage state is achieved only when the 24 V DC supply voltage as well as the supply lines to the switch contacts are safely

switched off and secured against being switched on again.



Coded plug-in terminal blocks allow a connection crosssection of up to 2.5 mm<sup>2</sup>. The supply voltage must be externally fused against excess current with a fuse of 2.5 AmT. The switch contacts must also be externally fused against excess current with a maximum of 4A gG. This prevents the safety-related contacts from welding together if the current load is too high!

4.2 Power Supply Requirements



The supply voltage of 24 V DC must guarantee safe mains separation and be able to bridge an interruption in voltage of 20 ms at full load. The functional earth connection of the MSI is established when snapped onto the grounded metal mounting rail via the rear clamp fixture.

The lead for the supply voltage must be externally fused against excess current with a maximum of 2.5 AmT.

# 4.3 Connecting AOPDs, Type 4 or Type 2

The examples below show possibilities for connecting and combining AOPDs of various safety categories and with various output features (relays, safety-oriented transistor outputs, cross circuit monitoring within and outside the AOPD).

AOPDs Type 4 with transistor outputs and cross connection monitoring function can directly connected to the safety inputs S1and S2. See Example 1.

AOPDs Type 4 with relay outputs, safety switches or emergency stop buttons must be connected so that the odd-numbered test signal T1 are directed via the non-delaying contacts to an odd-numbered safety input (T1=>S1) and vice versa (T2=>S2). See Example 2.

AOPDs Type 2 are periodically tested using the timedisplaced test signals T1 or T2. The odd-numbered test signal must be directed to an even-numbered safety input by the way of the time-delaying AOPD (T1=>S2) and vice versa (T2=>S1). The AOPD response time to a test request must be in a range of 2 to 18 ms. See Example 3.

All available safety inputs must be occupied! In case no components are connected, the remaining inputs must be connected to the corresponding test signal using bridges. In doing so, please note that the odd-numbered test signal must be connected to the odd-

numbered safety input via the non-delaying bridge (T1 => S1) and vice versa (T2 => S2). See Example 4.

If type 2 AOPDs are connected:

- according to DIN EN IEC 61496-1, only a maximum of PL c or SIL CL 1 can be achieved!
- when cables are laid without protection, a failure detection time of up to 10 s is possible.

## Example 1

1 AOPD Typ 4 with 2 safetyrelated transistor outputs and internal cross connection.

## Example 2


1 AOPD Typ 4 with 2 normally open relay contacts. Cross connection monitoring by using the test monitoring function.


### Example 3


2 AOPD Typ 2 with one safety-related transistor output each. Cross connection between signals T1 and T2.


## Example 4

1 AOPD Typ 2 with one safety-related transistor output. the leads will be detected.





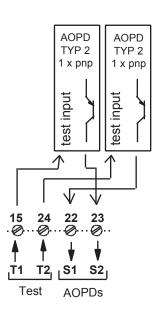



## 4.4 Connecting Machine Controls



The safety-related parts of the controls comprise more than the MSI-s/R described above. They also include successive control elements and even power transmission elements which must be safely and promptly shut down. Particular attention must be paid to maintaining the safety category requirements. Important information in this regard can be found in the harmonized European standard DIN EN ISO 13849-1.



Essential prerequisites for safe operation are the abilities to electrically influence the interruption of the dangerous movement and to bring the machine to a standstill as


quickly as possible. These factors, as well as the response times of AOPDs and the MSI, must be taken into consideration when calculating the safety distance.

The response times depend on the type of AOPD selected (see Chapter 6, Technical Data). Other parameters, such as hand/arm/body approach speed or additional safety distance, depend on the particular application and the resolution of the AOPD being used. The European standard DIN EN ISO 13855 contains equations and examples for a variety of configurations.


# 5 Connection Circuit Diagram, Examples

The connection examples below show a wiring suggestion for the MSI-s/R as well as a connection example for

an EMERGENCY STOP button.

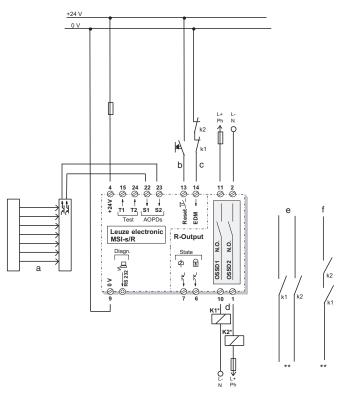

Connection example MSI-s/R with one AOPD Type 4

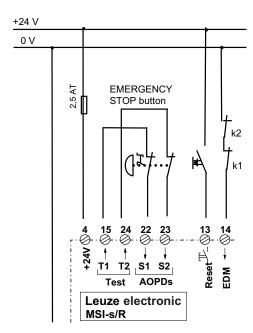

Example: connection of two-channel EMERGENCY STOP button

AOPD Type 4 а Command device for releasing the start/restart interlock b Feedback loop for external device monitoring С Pin 7 Indicating output "status safety outputs" Pin 6 Indicating output "status start/restart interlock" Output Signal Switching Devices (OSSDs) d Switching off path with two-channel control е Switching off path with one-channel control Suitable spark suppression required In general, both of the contacts must be used in the subsequent machine control path. Use relays or contactors with positivedriven contacts only.

# All available safety inputs must be occupied!

See Chapter 4.3.

# 6 Technical Data and Ordering Information

# 6.1 MSI-s/R

| Version, Type<br>Modular Safety Interface  | MSI-s  |
|--|--|
| Type in accordance with DIN EN IEC 61496-1   | Type 4   |
| SIL in accordance with IEC 61508   | SIL 3  |
| Performance Level (PL) in accordance with DIN EN ISO 13849-1   | PL e   |
| Category in accordance with DIN EN ISO 13849-1   | Cat. 4   |
| Mean probability of a dangerous failure per hour (PFH $_{\rm d}$ ) as a function of the mean number of annual switching cycles of the relay ${\rm n_{op}}^{\star}$ | $ \begin{array}{llllllllllllllllllllllllllllllllllll$  |
| Number of cycles until 10 % of the components have a failure to danger ( $B_{10d}$ )   | 400,000: 100% of the max. switched current of loading cases AC1DC13 2,500,000: 60% of the max. switched current of loading cases AC1DC13 20,000,000: 60% of the max. switched current of loading cases AC1DC13 |
| Service life (T <sub>M</sub> )   | 20 years   |
| Connectable safety sensors S1-S2   | 1 AOPD, Type 4, Type 3 or up to 2 AOPDs, Type 2 (all in accordance with DIN EN IEC 61496-1)  |
| Connectable safety switches and command units at S1-S2   | Safety switches according to EN 1088 Area Emergency-Stop button according to EN ISO 13850  |
| Test outputs T1 and T2, Test interval Test impulses, time-displaced Response time AOPD Type 2 to a test request  | 200 ms<br>24 ms each<br>2 to 18 ms   |
| Available functions  | Start/restart interlock External device monitoring   |

| Control input<br>Start/restart interlock (Reset)  | Potential-free normal open contact (button or key button)  |
|---|--|
| Control input<br>External device monitoring (EDM) | Feedback of positive-guided contacts from downstream relays (see connection diagram in Chapter 5)  |
| Safety outputs<br>(Technical Data, see below)     | Relay outputs via /R-Output  |
| Supply voltage                                    | 24 V DC, ± 20%, external power supply (PELV) with safe mains separation and equalization for 20 ms voltage interruption required   |
| Current consumption                               | approx. 200 mA without external load   |
| External fusing                                   | 2.5 A  |
| Housing<br>Enclosure rating                       | IP 20; must be installed in electronics cabinet or housing with an enclosure rating of at least IP 54  Mounting at 35 mm DIN standard rail   |
| Protective class                                  |  |
| Ambient temperature, Operation                    | 0 + 55 °C  |
| Ambient temperature, Storage                      | -25 + 70 °C  |
| Relative humidity                                 | 93 % max.  |
| Connection type (GS-ET-20: 2014)                  | pluggable, coded screw-type terminals Cable cross-section min., rigid, flexible: 0.14 mm² Cable cross-section max., rigid, flexible: 2.5 mm² Cable cross-section AWG/kcmil, min./max.: 26/14 Cable cross-section UL AWG/kcmil: 30-12 |
| Dimensions  | See dimensional drawing  |

<sup>\*</sup>nop = mean number of annual actuations, see C.4.2 and C.4.3 of DIN EN ISO 13849-1

Use the following formula to calculate the mean number of annual actuations:

$$n_{op} = (d_{op} \cdot h_{op} \cdot 3600 \text{ s/h}) \div t_{Zyklus}$$


In doing so, make the following assumptions with regard to the use of the component:

 $h_{op}$  = mean operating time in hours per day  $d_{op}$  = mean operating time in days per year  $t_{Zyklus}$  = mean time between the start of two successive cycles of the component (e.g switching of a valve) in seconds per cycle

# 6.2 /R-Output

| OSSD safety outputs switching voltage/switching current                   | 2 safety-related normal open contacts,<br>60 V DC, 250 V AC, 5 A max.<br>Minimum switching current 20 mA                                  |  |  |  |
|---|---|--|--|--|
| OSSD external fusing (EN 60269-1)   | 4A gG D-fuse  |  |  |  |
| Contact currents (IEC EN 60947-5-1)                                       | AC15, 3A<br>DC13, 2A  |  |  |  |
| OSSD response time MSI (without AOPD)                                     | for AOPD Type 4, transistor outputs<br>for AOPD Type 4, relay outputs<br>for AOPD Type 2<br>for safety switches (electro mecha-<br>nical) | 22 ms<br>64 ms<br>64 ms<br>64 ms             |  |  |
| OSSD reset time   | 100 ms  |  |  |  |
| OSSD suitable spark extinguishing over the coils of the downstream relays | Required  |  |  |  |
| Status output "Status switch outputs" not to be used for safety circuit!  | pnp switch output<br>OSSDs ON-state:<br>OSSDs OFF-state:  | active high, 24 V DC, 60 mA max. active low  |  |  |
| Status output "Status start/restart interlock"                            | pnp switch output<br>locked:<br>not locked:   | active high, 24 V DC,, 60 mA max. active low |  |  |

# 6.3 Dimensional Drawing

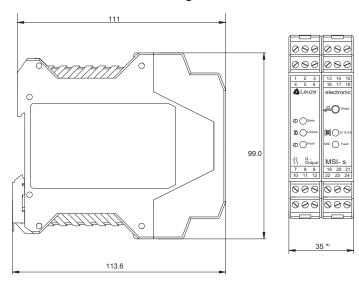

\*) Stringing together without distance possible

# 6.4 Ordering Information

| Туре                                     | Part No. |
|--|----------|
| MSI-s/R                                  | 549900   |
| MSI diagnosis software                   | 549930   |
| PC cable 3 m                             | 549953   |
| PC cable 5 m                             | 549955   |
| /R output subassembly (replacement part) | 509210   |

# ▲ Leuze electronic

the sensor people

| DECLARATION CE DE<br>CONFORMITE<br>(ORIGINAL) | Le constructeur déclare que les produits identifiés suivants sont conformes aux directives CE et normes mentionnées.   | Description de produit: Interface de sécurité pour l'exploitation de signaux relatifs à la sécurité et la géneration de signaux de coupure sécuritaires sur la base d'une commande à microprocesseur à deux canaux Elément de sécurité selon 2006/42/CE annexe IV MSI (Module findrette de sécurité (-ssc), (-ld), (-n., -mx), (-n.fmx) (-ssc), (-ld), (-n., -mx), (-n.fmx) N° série voir plaques signalétiques | Directive(s) CE appliquées:<br>2006/42/CE<br>2004/108/CE | Normes appliquées:<br>2:2013; GS-ET-20 :10/2014 | Organisme notifie / Attestation d'examen CE de type: |
|---|--|---|--|---|--|
| EC DECLARATION OF<br>CONFORMITY<br>(ORIGINAL) | The Manufacturer Leuze electronic GmbH + Co. KG In der Barlket , bo Bex 1111 73277 Owen, Germany declares that the following listed products fuffi the relevant provisions of the mentioned EC Directives and standards. | Description of product: Safety interface device to evaluate safety related signals and to create safety related output switching signals based on two micro-processors safety component in acc. with 2006/42/EC armex IV MSI (Modular Safety interface) (   |  |   |  |

Autorisé pour documentation est le constucteur déclaré, contact: quality@leuze.de

Authorized for documentation is the stated manufacturer, contact: quality@leuze.de

Dokumentationsbevollmächtigter ist der genannte Hersteller, Kontakt: quality@leuze.de

Leuze electronic GmbH + Co. KG, In der Braike 1 D-73277 Owen, quality@leuze.de

Ulrich Barbach,

Probabilith In The side General Conference of the Conference of th Owen, 24,04.2015

Datum / Date / Date electronic Gmith + Ca, MG, SEC Own | Registered Staget / RF4.2014 Cases sensies 4, 05/256 Forsentedoruck | 14-48141 SSOG (14-48) 614 SSOG (19-86) 914 Inteligentedoruck | 14-48141 SSOG (14-48) 614 SSOG (14-68) 914 SSOG (14-6